



Video assembly
instructions
available online

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

23SV24034 LED Jack Skellington

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

ASSEMBLY REQUIRES AT LEAST 2 ADULTS. PLEASE FOLLOW THE STEP BY STEP GUIDE AND ENJOY LED JACK SKELLINGTON!

IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT SVI CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921, EMAIL CUSTOMERSERVICE@SVIUS.COM, OR CALL HOME DEPOT CUSTOMER SERVICE FROM MON-FRI 8:00AM TO 7:00PM AND SAT 9:00 AM TO 6:00 PM EST AT 1-877-527-0313.

IMPORTANT TIPS:



- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: LEDs don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.
- Be sure nothing is blocking the sensor.
- If the item still does not work, contact SVI Customer Service from 8:30am to 5:30pm PST at 1-855-428-3921, email customerservice@svious.com, or call Home Depot Customer Service from Mon-Fri 8:00am to 7:00pm and Sat 9:00 am To 6:00 pm EST at 1-877-527-0313.

PARTS LIST


- A. Right Base Half x 1
 - B. Left Base Half x 1
 - C. Shoes x 2
 - D. Lower Left Pole x 1
 - E. Lower Right Pole x 1
 - F. Left Pole x 1
 - G. Right Pole x 1
 - H. Costume x 1
 - I. Hip Frame x 1
 - J. Hip Hoop x 1
 - K. Chest Frame x 1
 - L. Arms x 2
 - M. Bow Tie x 1
 - N. Left Hand x 1
 - O. Right Hand x 1
 - P. Head x 1
 - Q. Scary Eye Set x 1
 - R. Tether Cable x 1
 - S. Base Extensions x 4
 - T. Stakes x 4
 - U. Adapter * x 1
- * Power Adapter Spec
Input: 120VAC 50/60Hz
Output: 5.9V 2.0A




NOTE: Throughout the instructions, Right and Left are from the character's point of view.

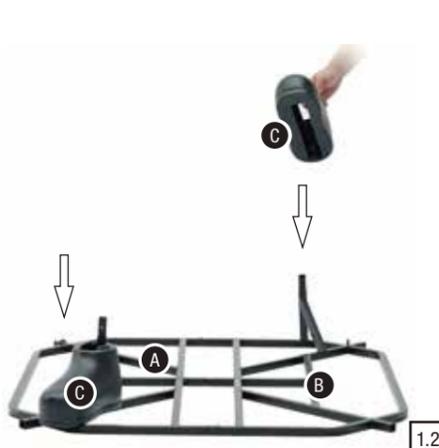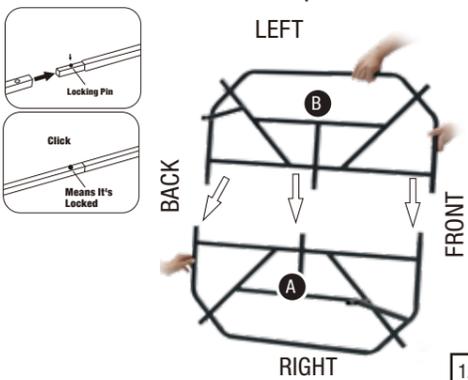

NOTE: Connect the cable from the top of the (D) Lower Left Pole to the corresponding cable available from the (F) Left Pole.

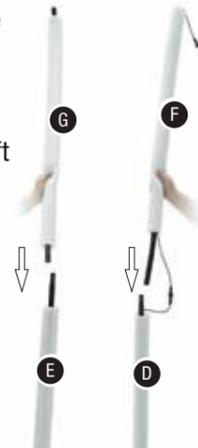


NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

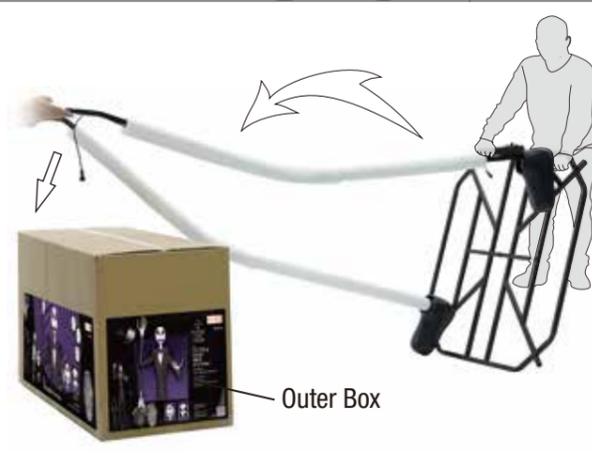


NOTE: Have someone hold the back of the (A) Base steady while others assemble LED Jack Skellington. The (A, B) Base should be held steady until it is set upright in Step 8.1.

NOTE: Connect the cable available from the bottom of the left pant leg of the (H) Costume to the corresponding cable available from the function control box at the bottom of the (D) Lower Left Pole.

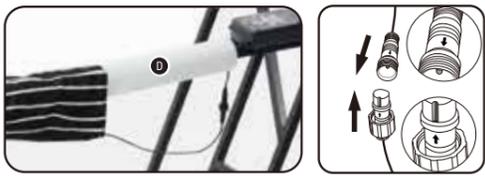



NOTE: Make sure that the (H) Costume is facing the correct way with the tails of the tailcoat aimed towards the back and the white undershirt towards the front.

3.1

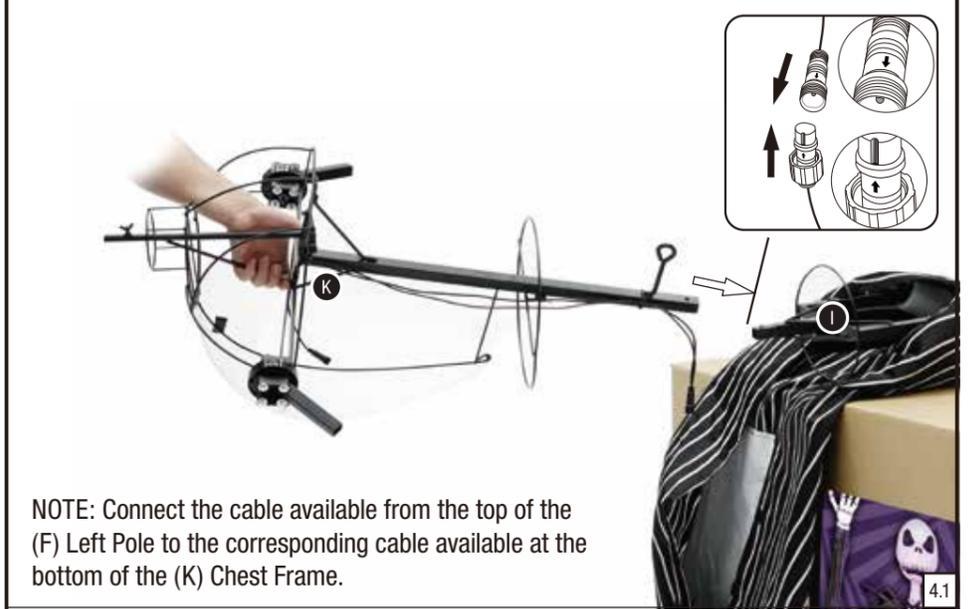


NOTE: Connect the cable available from the top of the (F) Left Pole to the corresponding cable available at the bottom of the (K) Chest Frame.

4.1

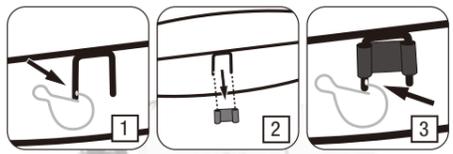
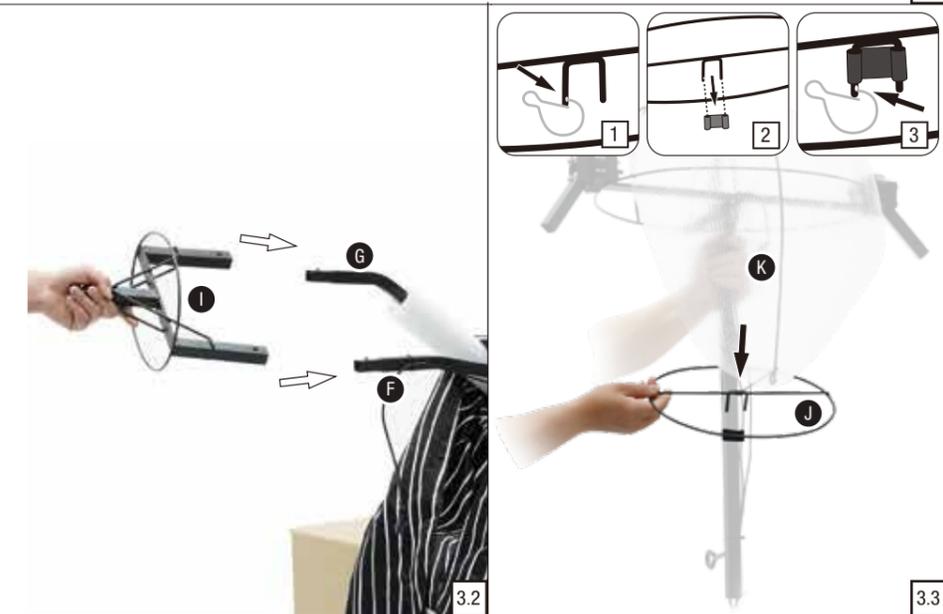


3.2


3.3

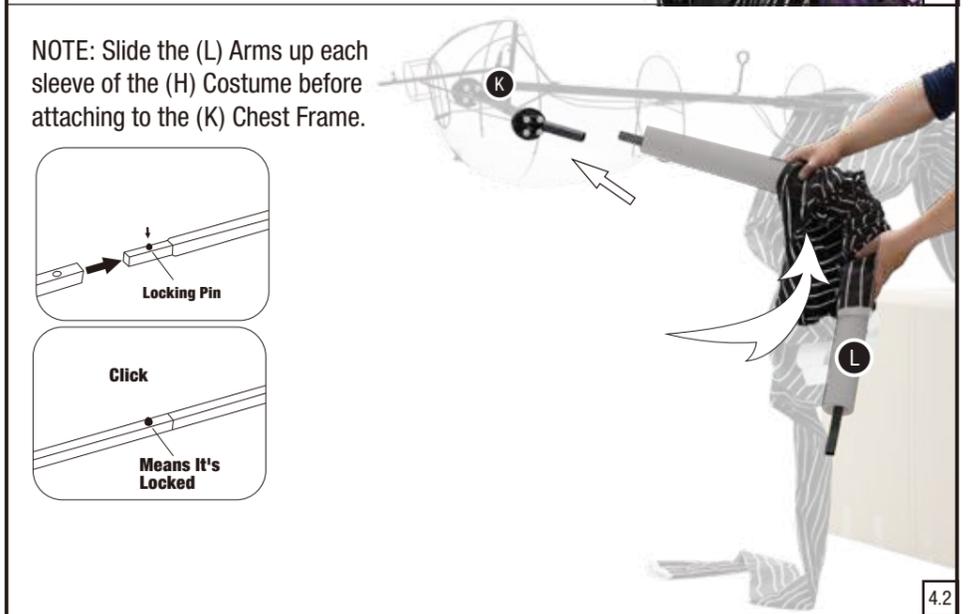



NOTE: Slide the (L) Arms up each sleeve of the (H) Costume before attaching to the (K) Chest Frame.

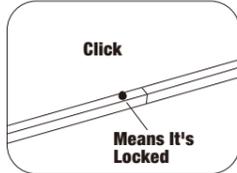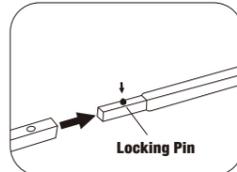


4.2

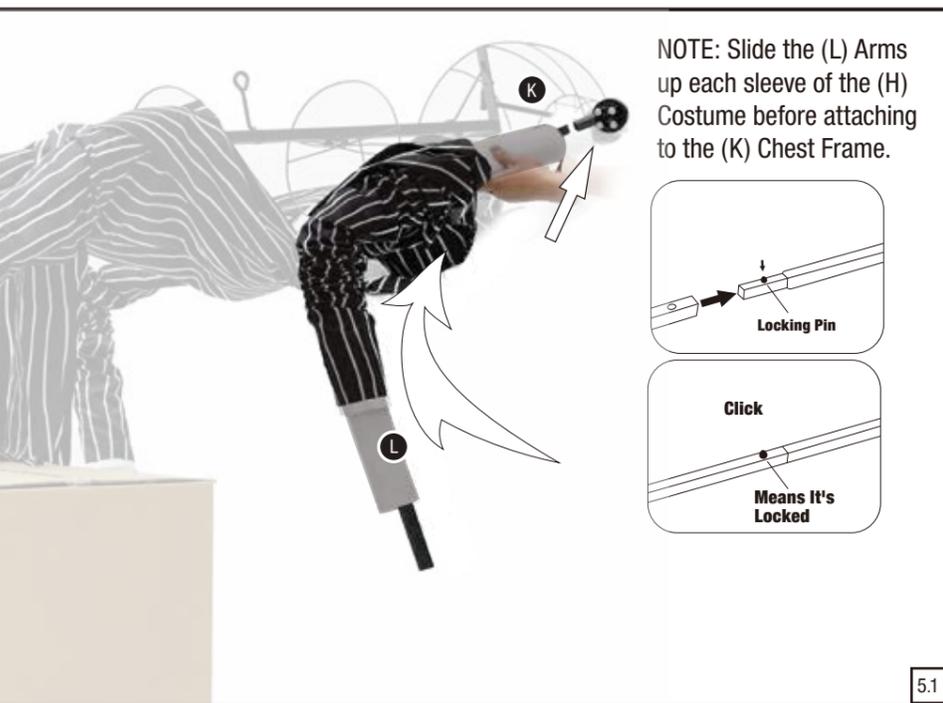




NOTE: Slide the (L) Arms up each sleeve of the (H) Costume before attaching to the (K) Chest Frame.

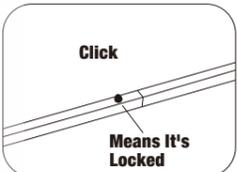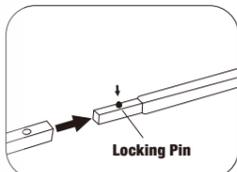

5.1

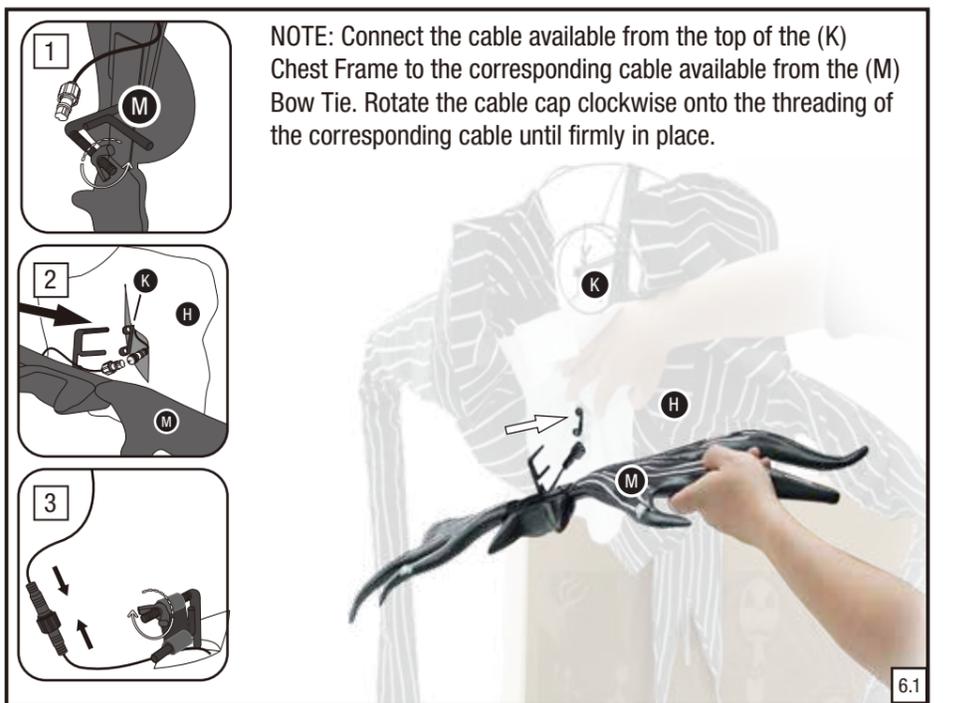

NOTE: Connect the cable available from the top of the (K) Chest Frame to the corresponding cable available from the (M) Bow Tie. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

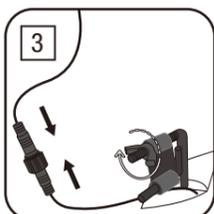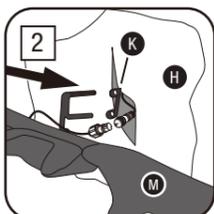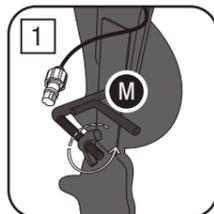

6.1



CAUTION: Cable may have sharp ends, use caution when assembling. If cable cannot reach, the upper body of LED Jack Skellington needs to be lifted up from the box but still in a laying position. This should enable the cable to reach.




5.2




NOTE: The (N, O) Hands can be oriented either palm up or palm down according to personal preference.



6.2

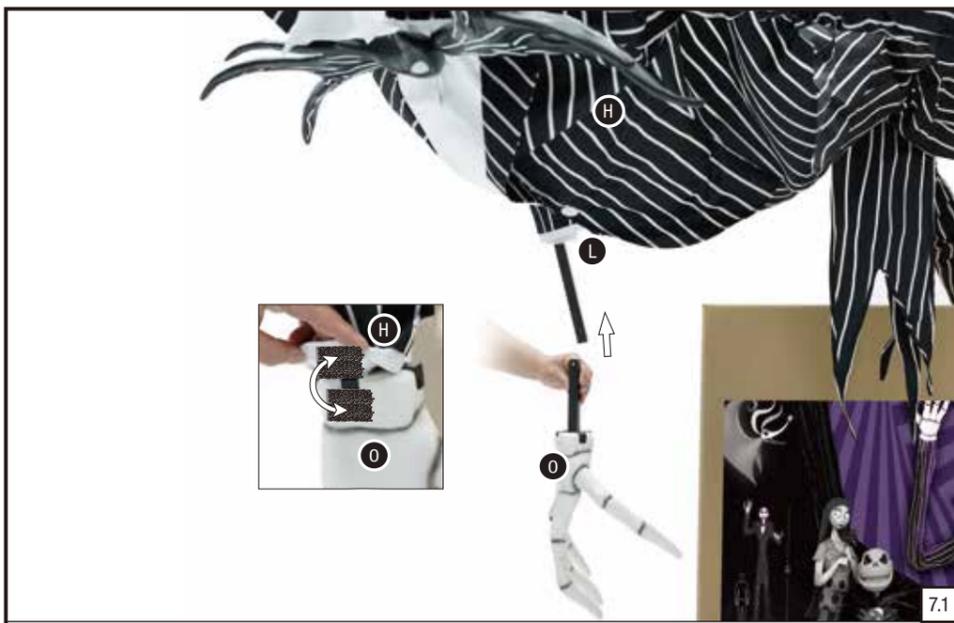


7.1

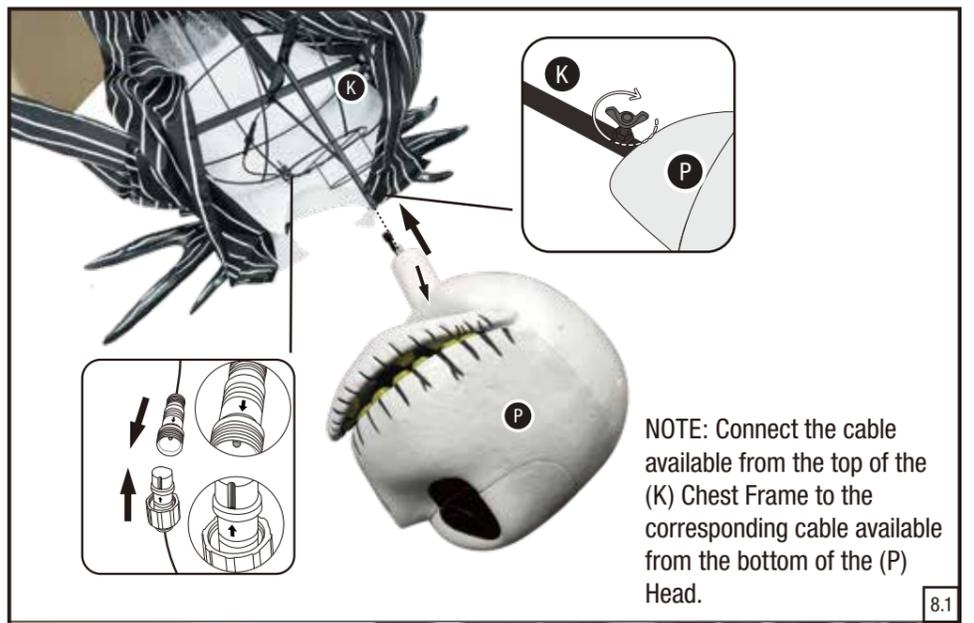

8.1

NOTE: The eye set on the (P) Head can be removed and replaced with the (Q) Scary Eye Set. Adjust to personal preference.

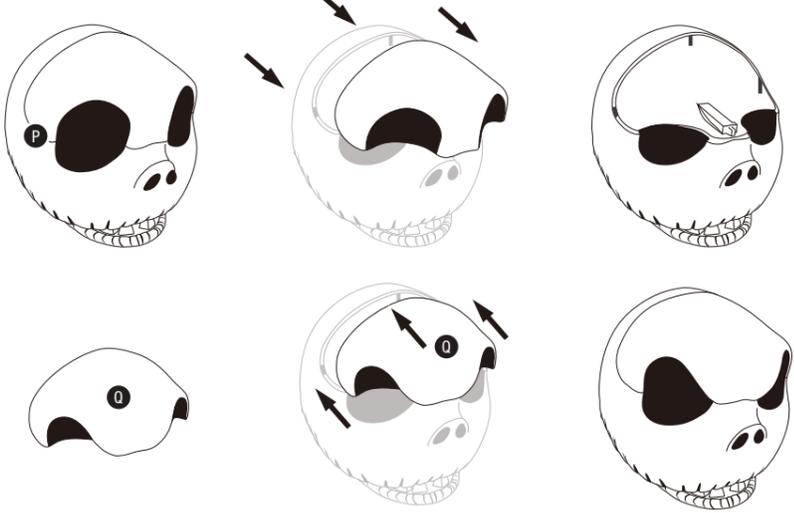

7.2



8.2



9.1




10.1

NOTE: It is strongly recommended that 2 adults assist with lifting up LED Jack Skellington.




9.2

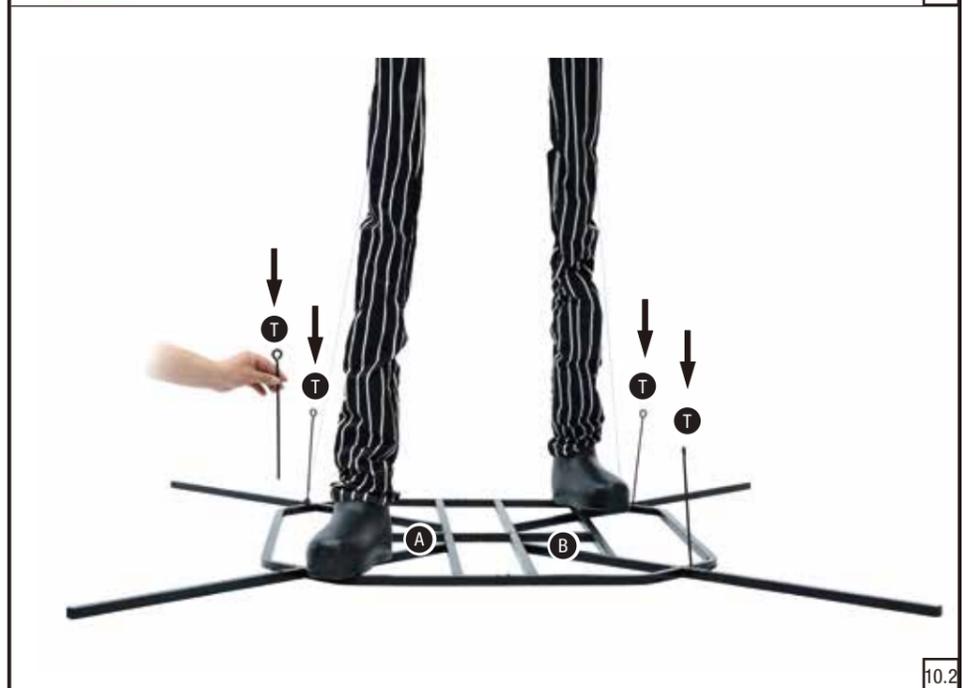

10.2

LED JACK SKELLINGTON IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!


If your application requires additional stability, add weights on top of the base (for example sand bags – not included).

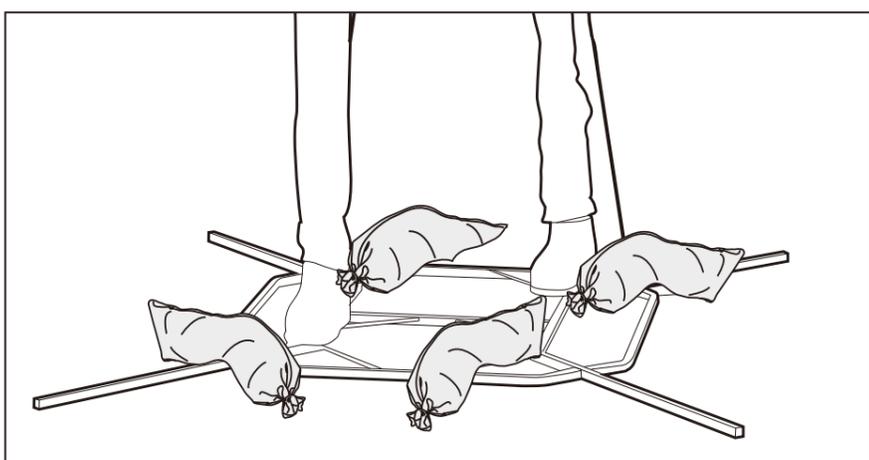

11.1

IR SENSOR

Be sure nothing is blocking the sensor.

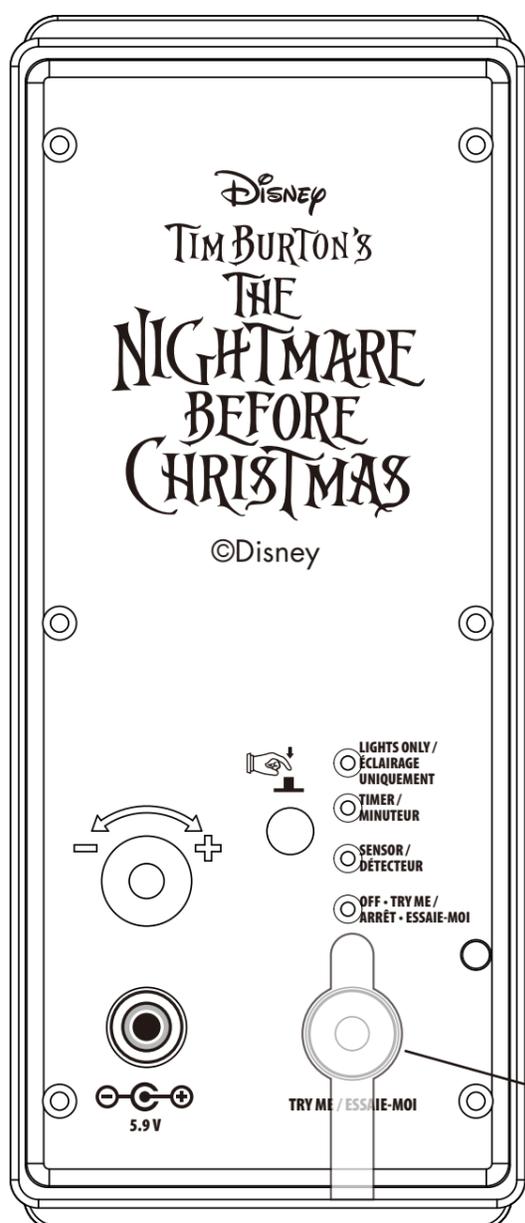

OPERATION INSTRUCTIONS:

The LED Jack Skellington is powered by an adapter. Plug in the power adapter into a standard power outlet. To turn on LED Jack Skellington, press the button on the Function Control Box. Press the button again to switch to the Timer setting. Press the button a third time to switch to the Sensor Setting. Press the button a fourth time to turn the item Off.

The item is activated by pressing the button on the Function Control Box and has the following settings:

LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT	This switch mode will activate the lights of the item. This switch mode does not have any animation or sound.
TIMER / MINUTEUR	Timer begins daily cycles of LIGHTS ONLY for 6hrs, then ALL functions off for 18hrs. LED Jack Skellington does not speak or move on Timer setting.
SENSOR / DÉTECTEUR	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below. LED Jack Skellington speaks and moves only when the control box is set to "SENSOR" and the sensor is activated. Between activations, LED Jack Skellington's LEDs will remain on.
OFF • TRY ME / ARRÊT • ESSAIE-MOI	This setting will deactivate the lights, sound, and animation of the item. This mode also allows the item to be activated if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one audio cycle with each Try Me activation.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

THE LED JACK SKELLINGTON IS COMPATIBLE WITH EXTERNAL TIMERS AND PRESERVES ITS SETTING WHEN THE POWER IS TURNED OFF/ON.

NOTE: Make sure the waterproof cap is covering the Try Me receiver at all times when not in use.

WARNING:

- Lay product down before a storm or strong winds.
- Don't climb or pull on product.
- Don't add to or modify product.
- Assemble and place the product on level surfaces only.
- Don't push or tilt product.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

1 WE SUGGEST AT LEAST TWO ADULTS FOR ASSEMBLY

2 NO MOVING AFTER FULLY ASSEMBLED

3 LEVEL AREA ONLY

7 USE WEIGHTS ON THE BASE

8 USE ADAPTOR

11 CONTACT US 1-877-527-0313

4 DO NOT PUSH OR TILT

5 DO NOT CLIMB OR PULL ON

6 DO NOT ADD TO OR MODIFY

9 CAUTION DAMAGE COULD OCCUR IN HIGH WINDS

10 CONTACT US CONTACT US IF LEDS DON'T WORK

Disney
 TIM BURTON'S
 THE
 NIGHTMARE
 BEFORE
 CHRISTMAS

© Seasonal Visions International
 Berkeley, CA 94710
 Tel: 1-855-428-3921
 All Rights Reserved
 MADE IN CHINA

© Seasonal Visions International
 San Diego, CA 92101
 Tel: 1-855-428-3921
 All Rights Reserved
 MADE IN CHINA