


9 FT COLOR CHANGING LED MURDEROUS MAPLE

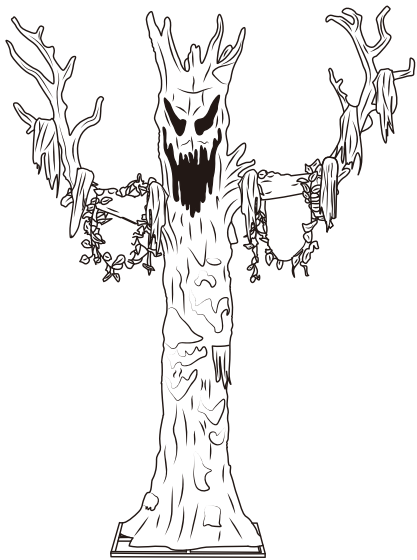

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday
1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM


IMPORTANT TIPS:

- Ensure that item's adapter is plugged in at the Function Control Box and plugged in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: Mouth and eyes don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.



PARTS LIST

- A. Base x 1
- B. Lower Support Pole x 2
- C. Middle Support Pole x 1
- D. Trunk Bottom x 1
- E. Trunk Middle x 1
- F. Trunk Top x 1
- G. Trunk Top with Control Box x 1
- H. Upper Support Pole x 1
- I. LED Panel x 1
- J. Face x 1
- K. Tree Top x 1
- L. Left Branch Base x 1
- M. Right Branch Base x 1
- N. Left Outer Branch x 1
- O. Right Outer Branch x 1
- P. Stakes x 4
- Q. Ivy x 2
- R. Hex Wrench x 1
- S. Adapter * x 1


Power Adapter * Spec
Input: 120V~60Hz
Output: 5.9V 1.5A
Wattage: 8.85W

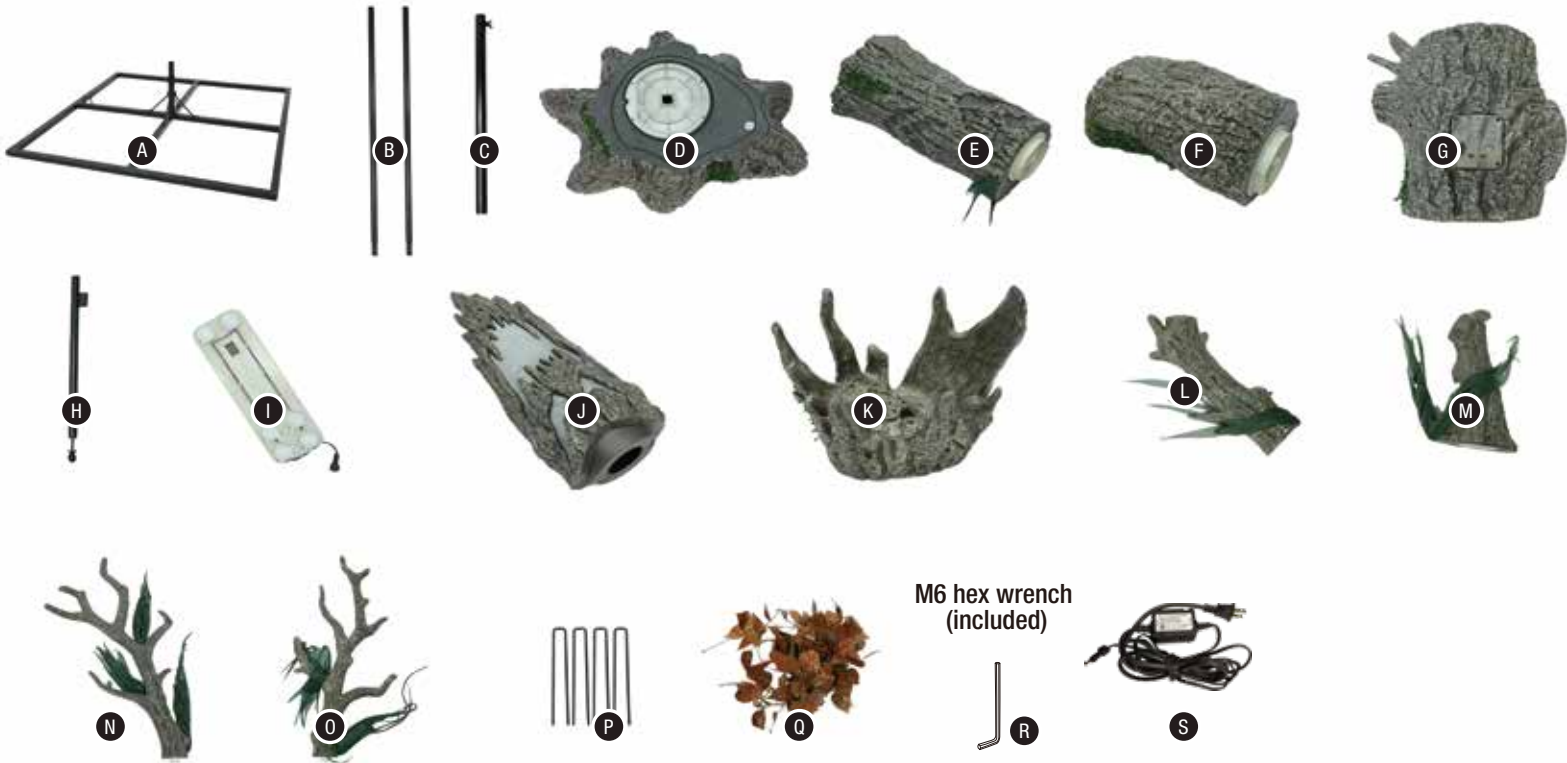


NOTE: Throughout the instructions, Right and Left are from the character's point of view.

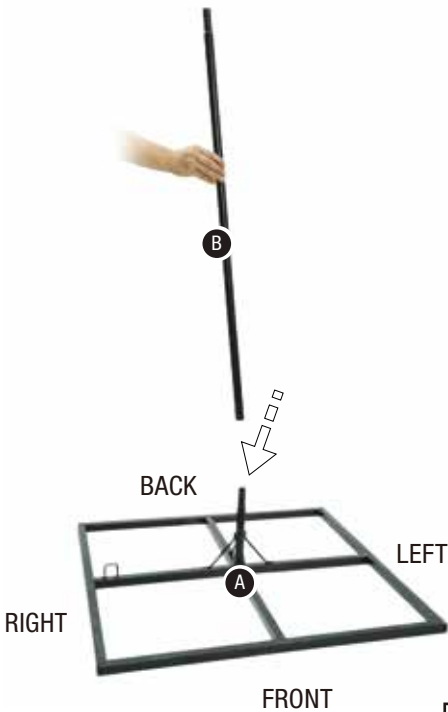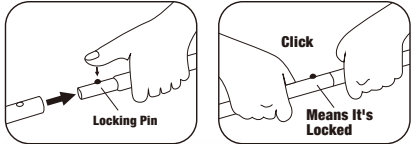

1.1

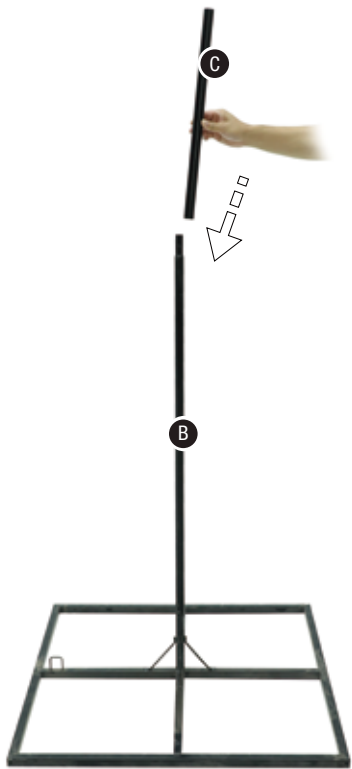








1.2

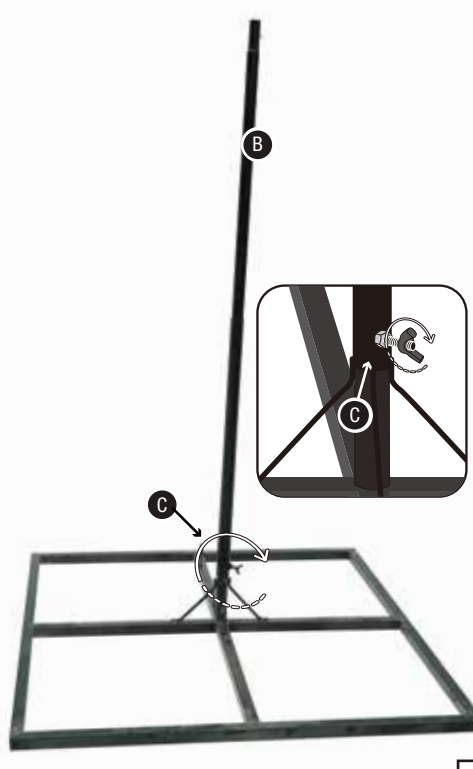

2.1







2.2

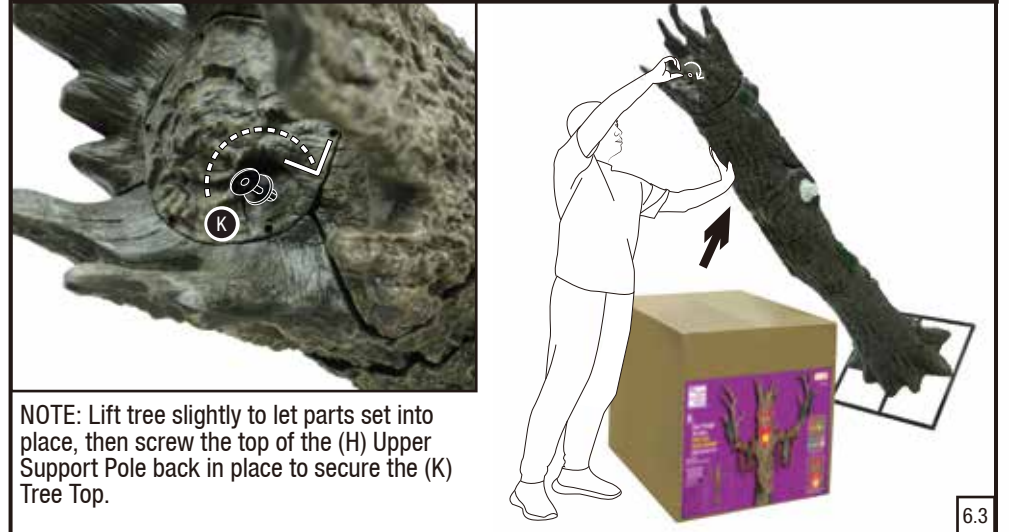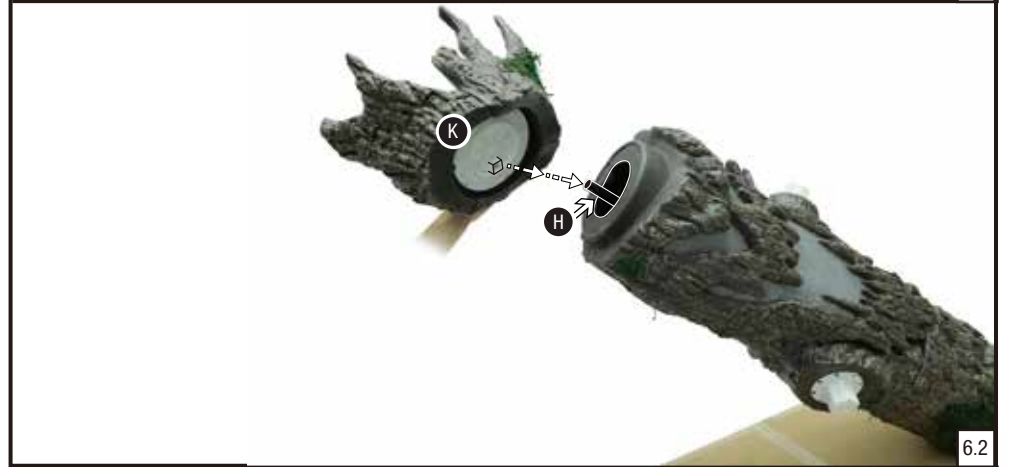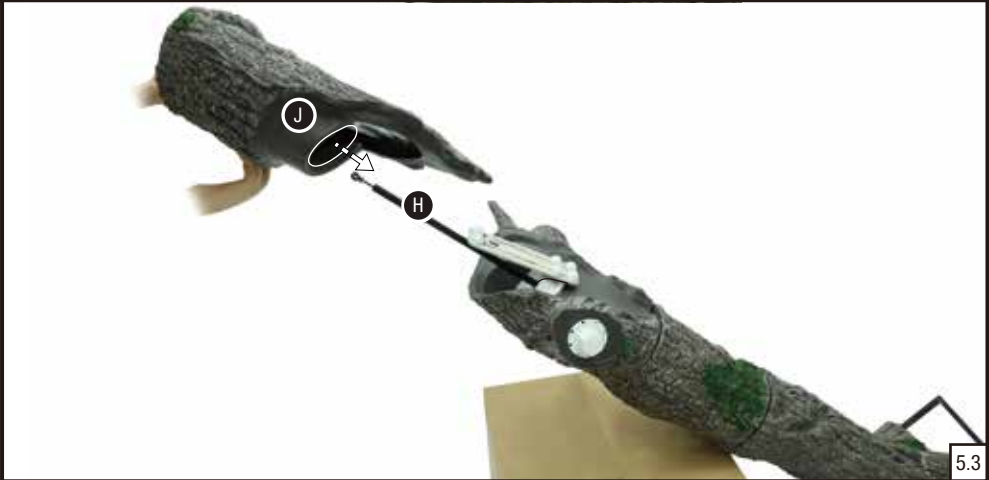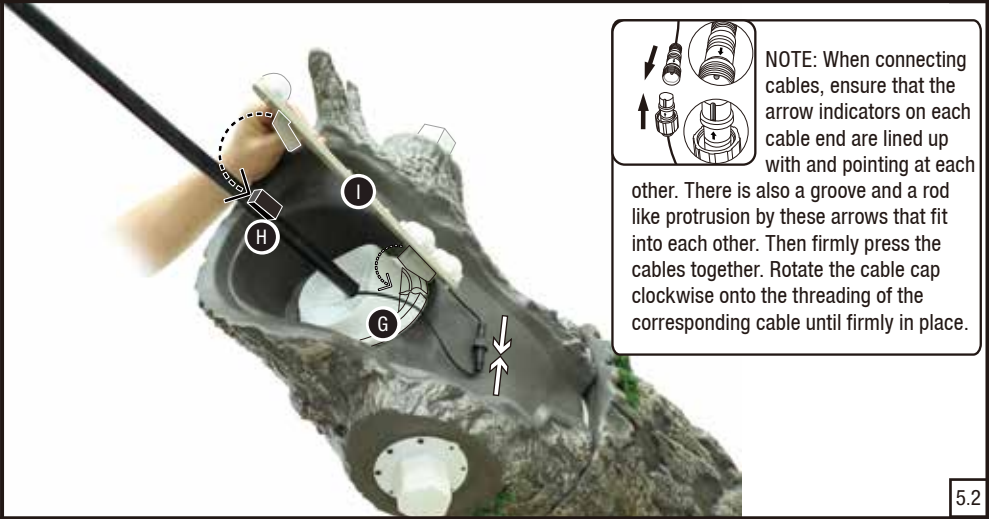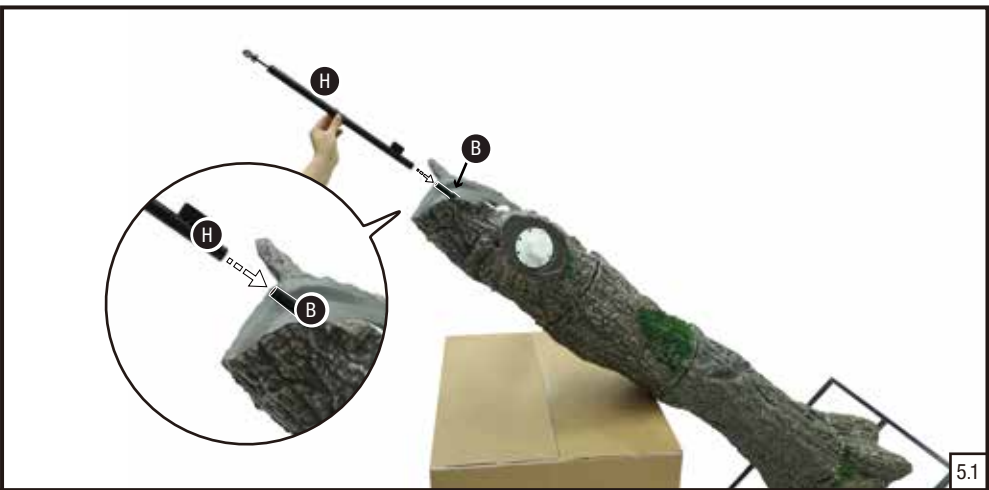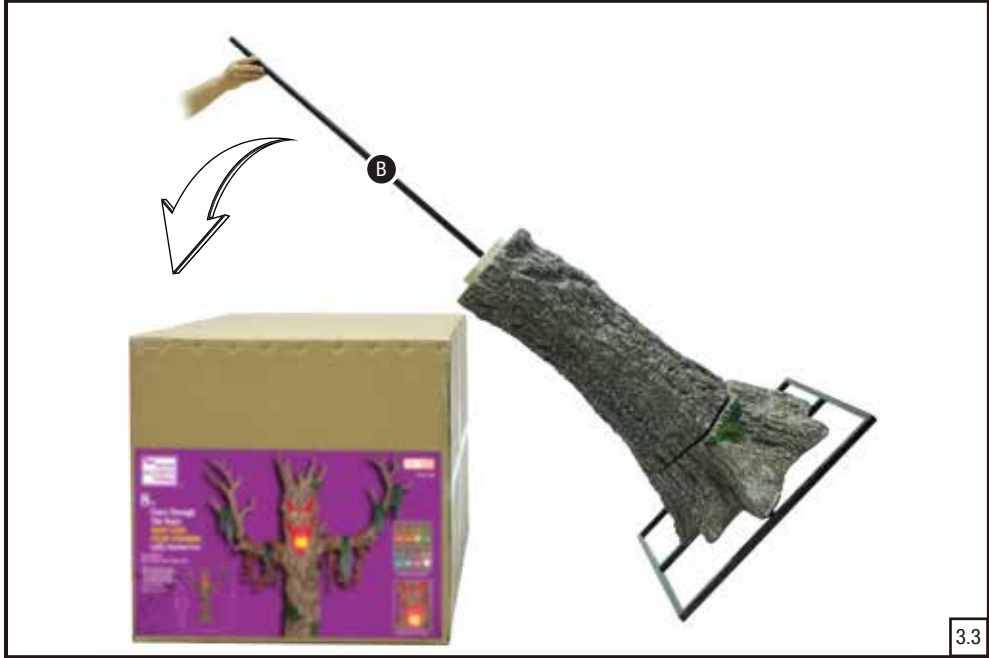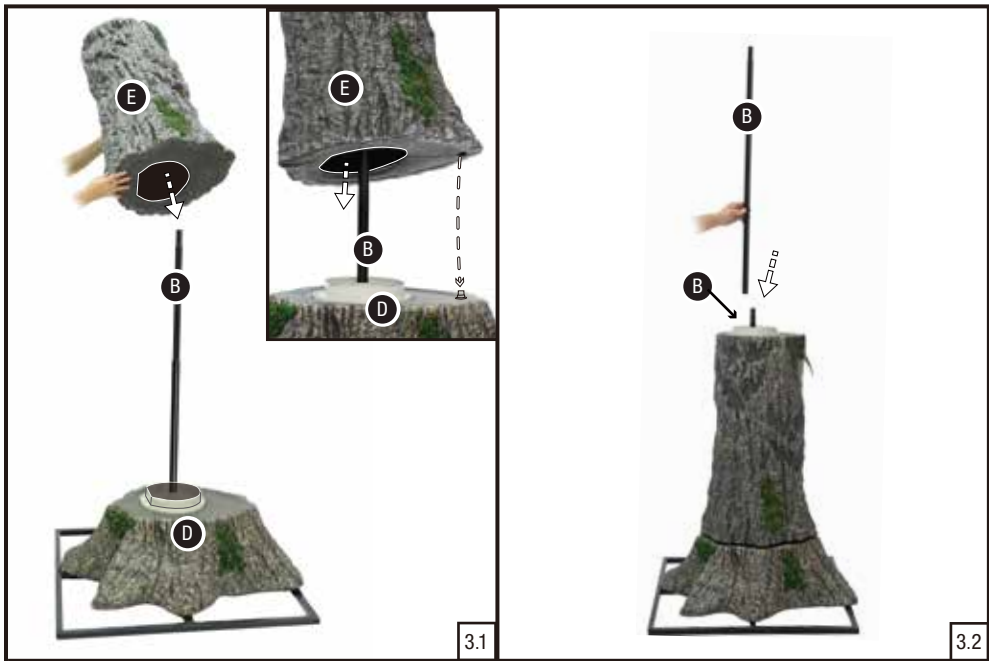

NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

NOTE: Lift tree slightly to let parts set into place, then screw the top of the (H) Upper Support Pole back in place to secure the (K) Tree Top.

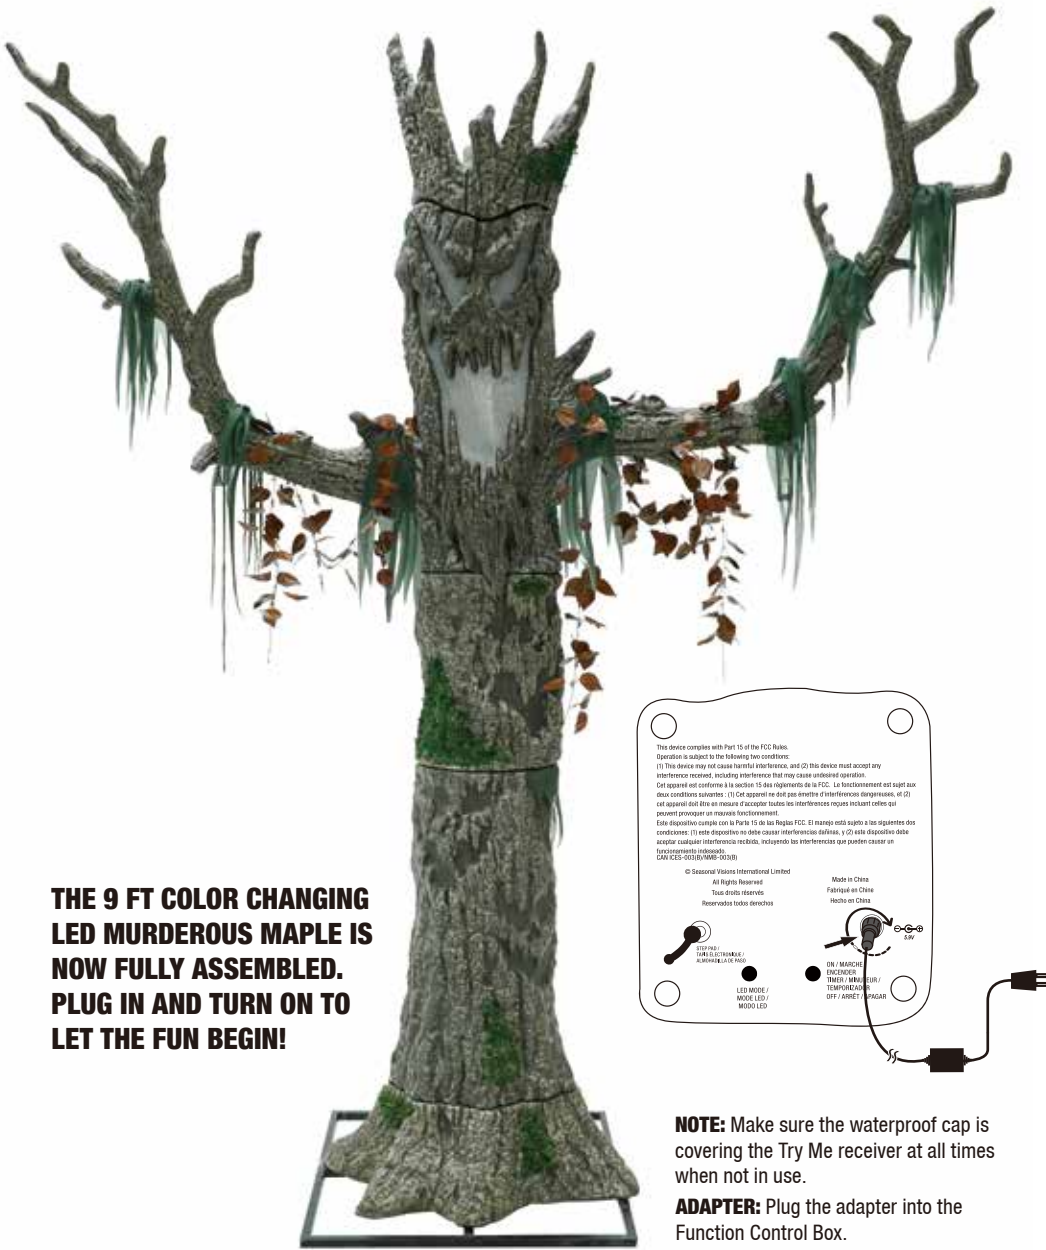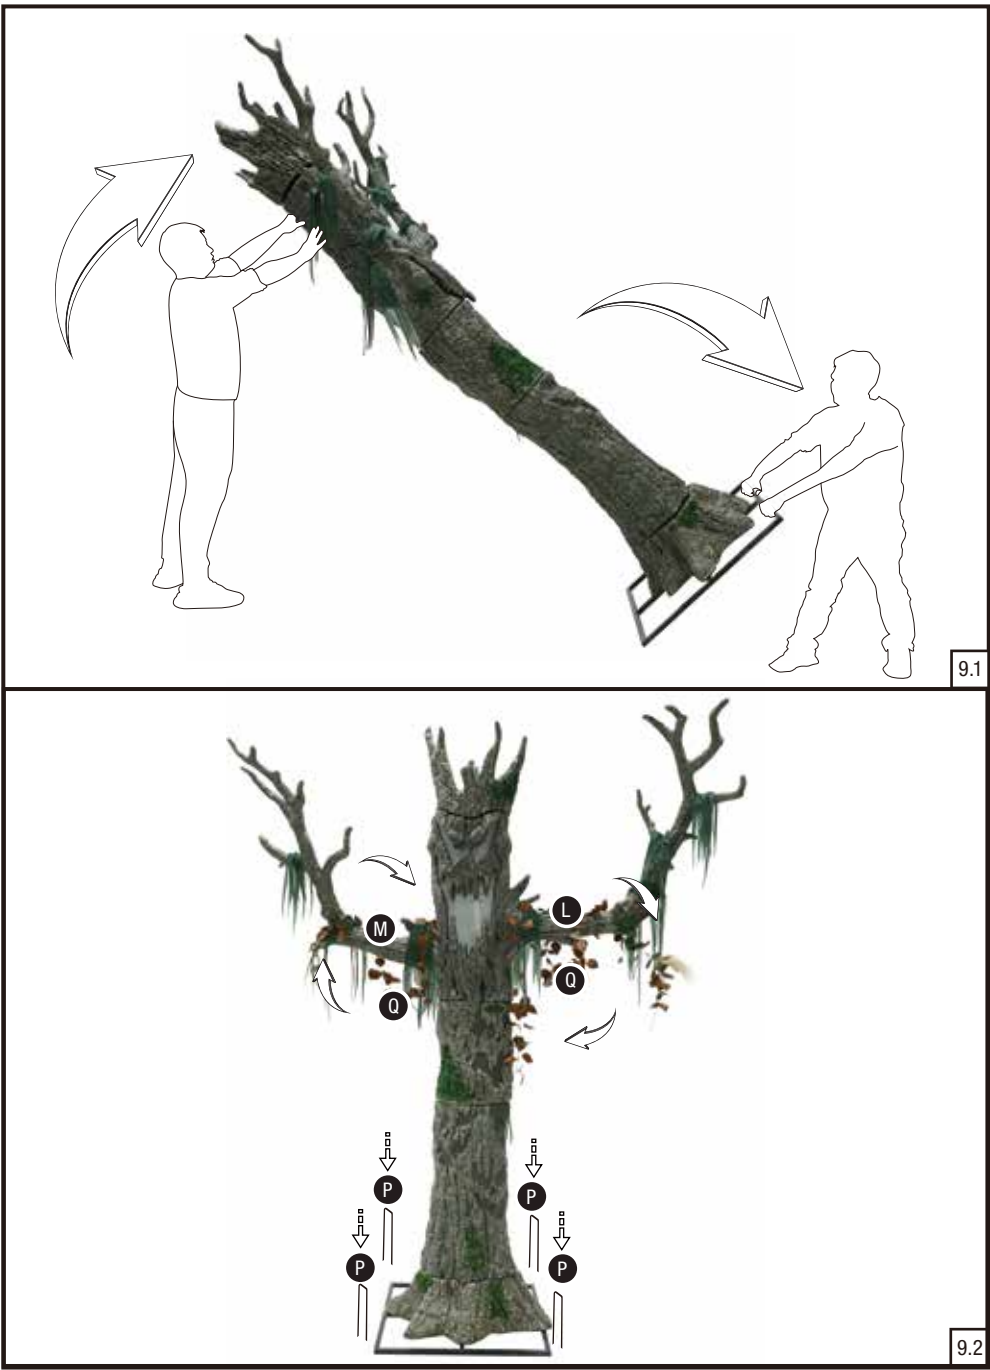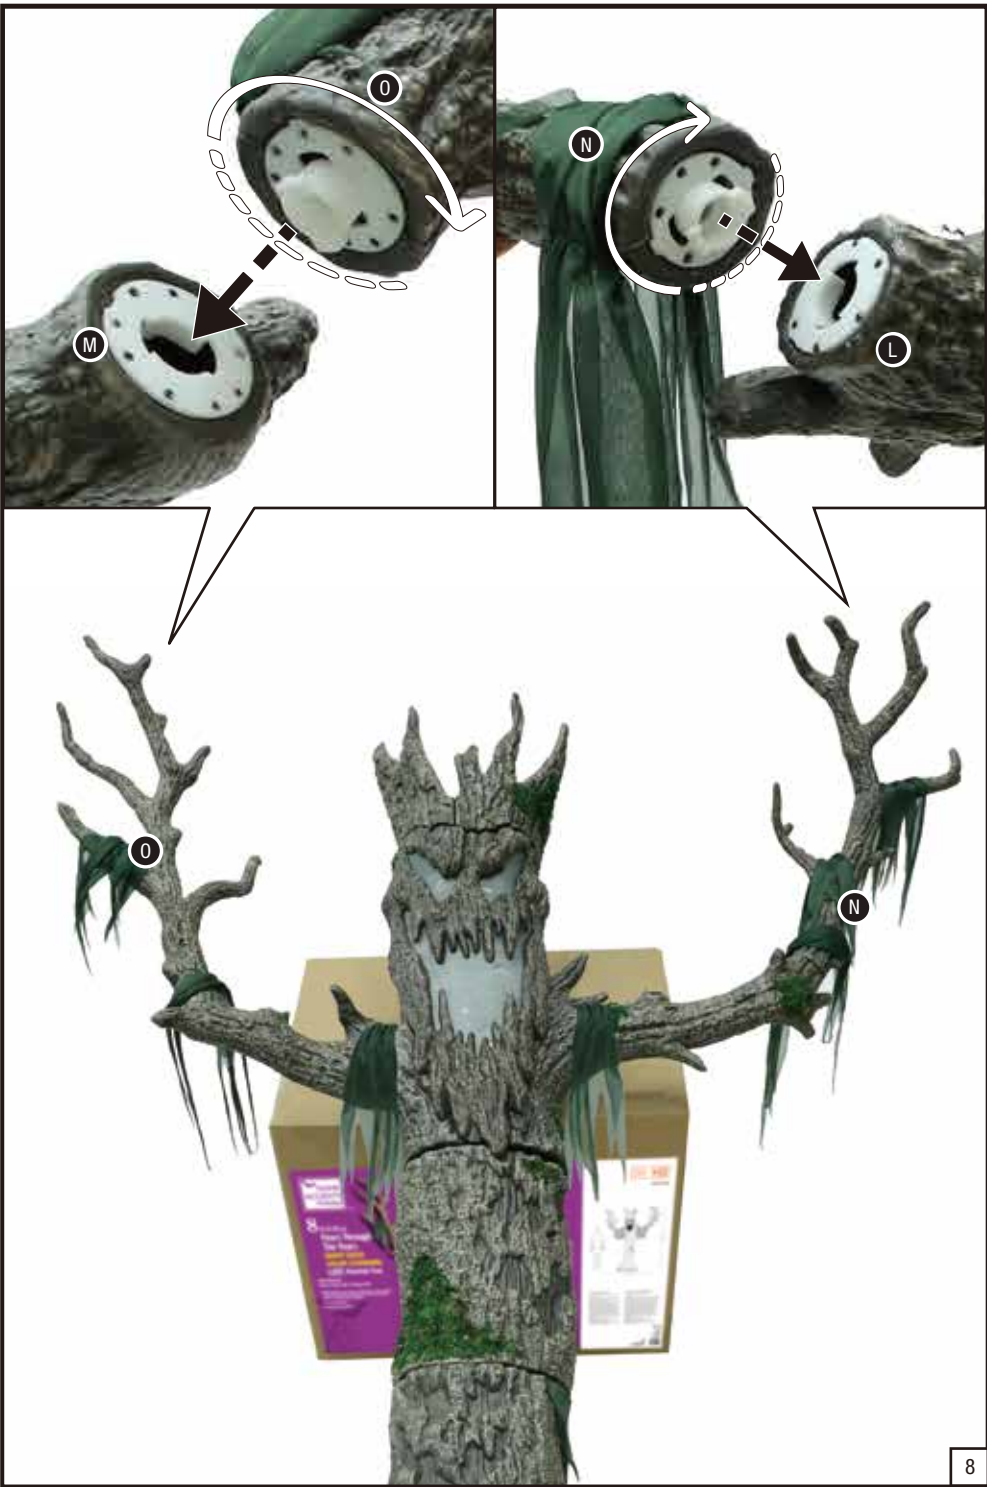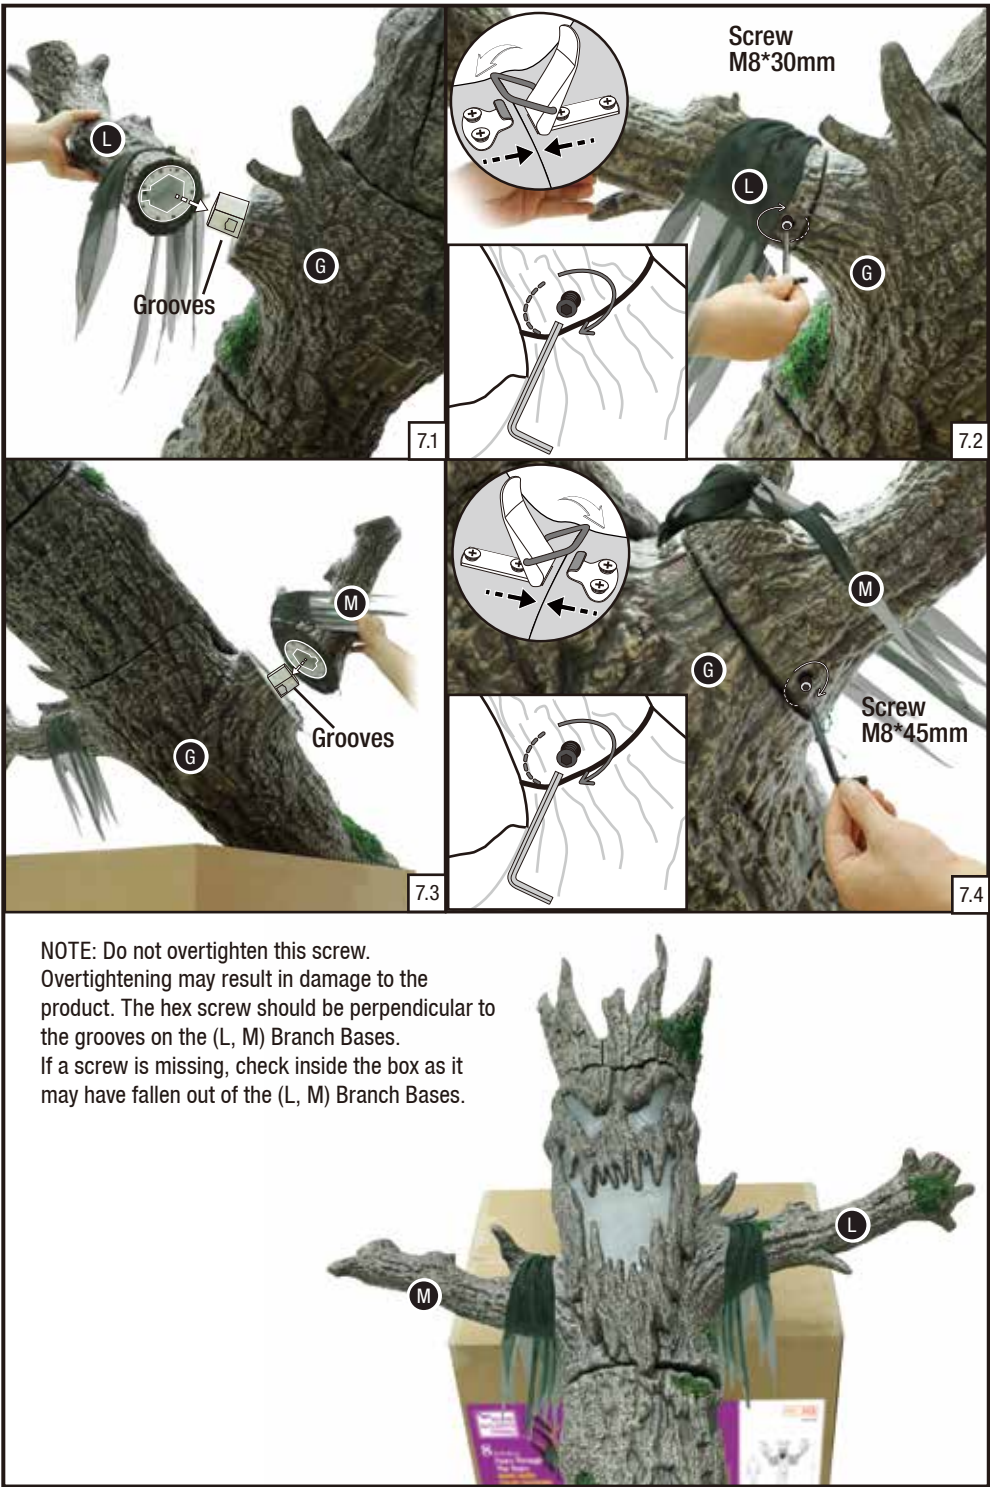

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (G) Trunk Top with Control Box, as desired.

2. Settings:

ON / MARCHE / ENCENDER	In this mode, the lights of the item are activated indefinitely until the setting is changed.
TIMER MINUTEUR TEMPORIZADOR	In this mode, the lights of the item are activated for a 6 hour period and then deactivated for an 18 hour period. This cycle continues indefinitely until the setting is changed.
OFF / ARRÊT / APAGAR	In this mode, the lights of the item are only activated for an 15 second activity cycle if the Step Pad is pressed. Otherwise the lights remain off.
LED MODE/ MODE LED/ MODO LED	The LED Mode button allows the user to toggle between 8 different light functions which include; steady red, steady yellow, steady green, steady aqua, steady blue, steady purple, steady white, and color changing.

NOTE: The 9 ft COLOR CHANGING LED Murderous Maple is compatible with external timers and preserves its setting when the power is turned OFF/ON.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the adapter supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching color.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

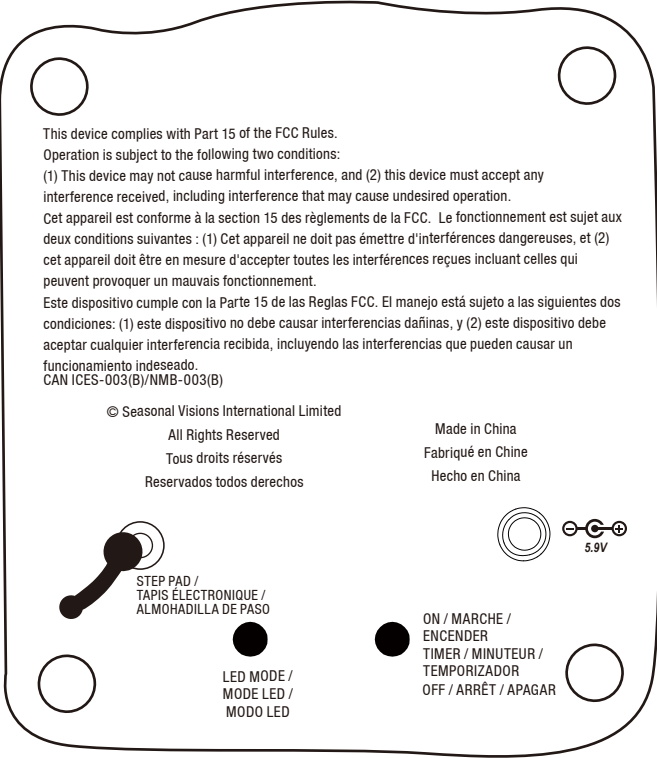

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
CAN ICES-003(B)/NMB-003(B)

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM