



USE AND CARE GUIDE

USA 1011183707  
Model 24SV24393

8.5 FT TOWERING REINDEER

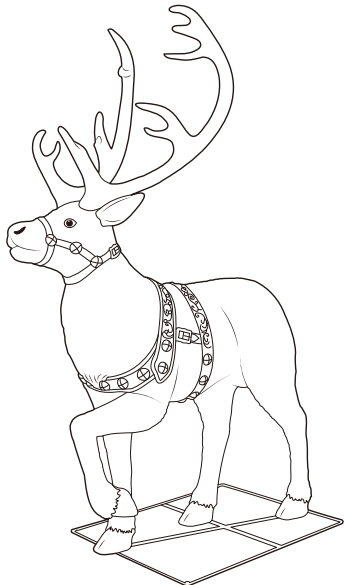



**Video assembly instructions available online**


Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday  
**1-855-HD-HOLIDAY (1-855-434-6543)**  
**HOMEDEPOT.COM**

- IMPORTANT TIPS:**
- Ensure that item's adapter is plugged in at the Function Control Box and plugged in the wall.
  - Ensure that the switch on the function control box is on the desired setting.
  - If not functioning properly (ex: LEDs don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
  - Be sure nothing is blocking movement or caught in moving parts.
  - Ensure that the floor or surface that the item sits on is flat and level.
  - Be sure nothing is blocking the sensor. See Operations Instructions page 4 for complete details.

PARTS LIST

- A. Base x 1
- B. Left Hind Pole x 1
- C. Right Hind Pole x 1
- D. Front Pole x 1
- E. Left Hind Leg x 1
- F. Right Hind Leg x 1
- G. Right Front Leg x 1
- H. Body x 1
- I. Chest x 1
- J. Left Upper Front Leg x 1
- K. Left Lower Front Leg x 1
- L. Head x 1
- M. Left Ear x 1
- N. Right Ear x 1
- O. Lower Left Antler x 1
- P. Lower Right Antler x 1
- Q. Upper Left Antler x 1
- R. Upper Right Antler x 1
- S. Right Hind Leg Cap x 1
- T. Right Front Leg Cap x 1
- U. Left Hind Leg Cap x 1
- V. Shoulder Cap x 1
- W. Chest Cap x 1
- X. Stakes x 1
- Y. Small Parts Bag x 1
- Z. Adapter \* x 1


Power Adapter \* Spec  
Input: 120V~60Hz  
Output: 5.9V 1.5A  
Wattage: 8.85W

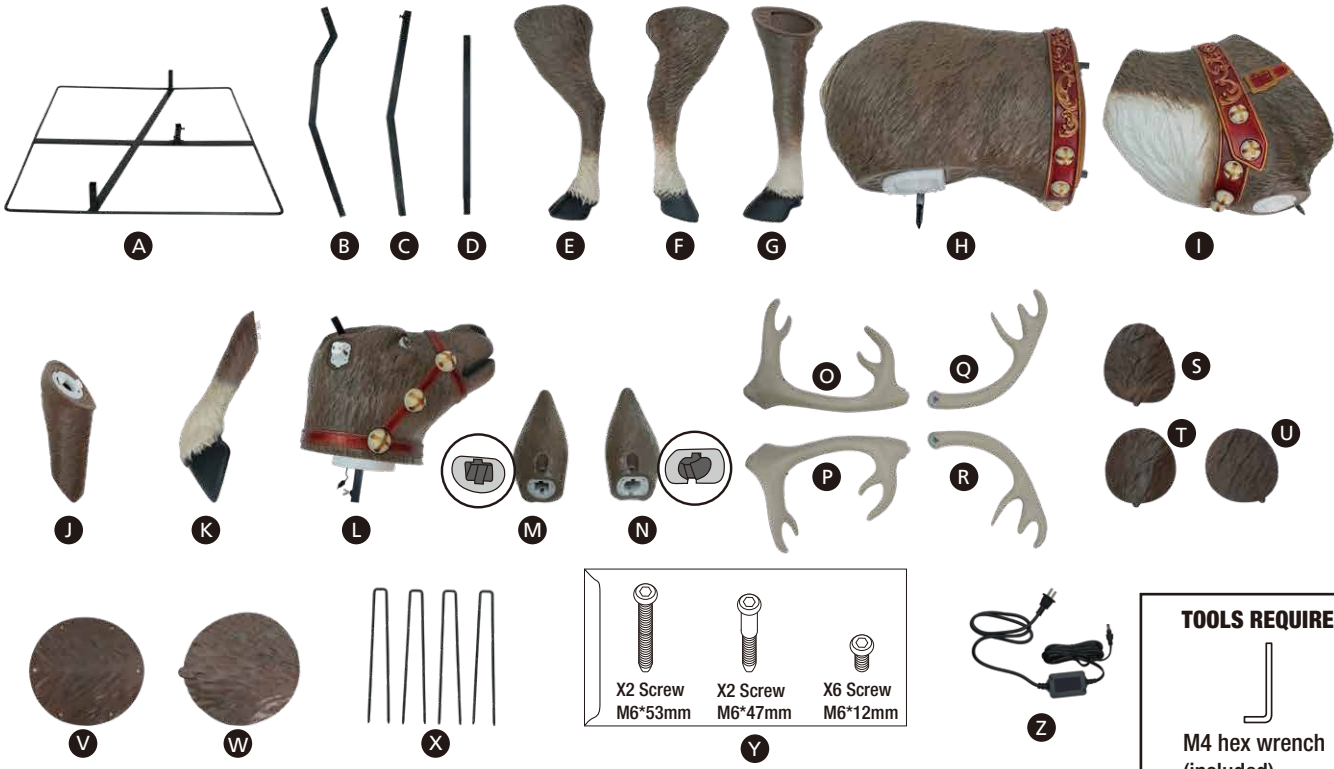


TOOLS REQUIRED

M4 hex wrench (included)


NOTE: Throughout the instructions, Right and Left are relative to the character.

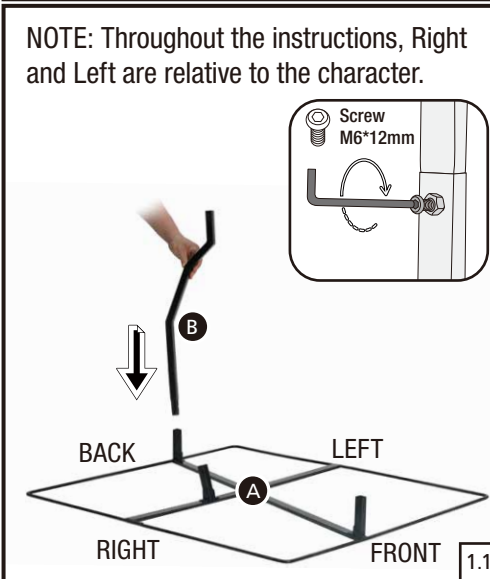


1.1

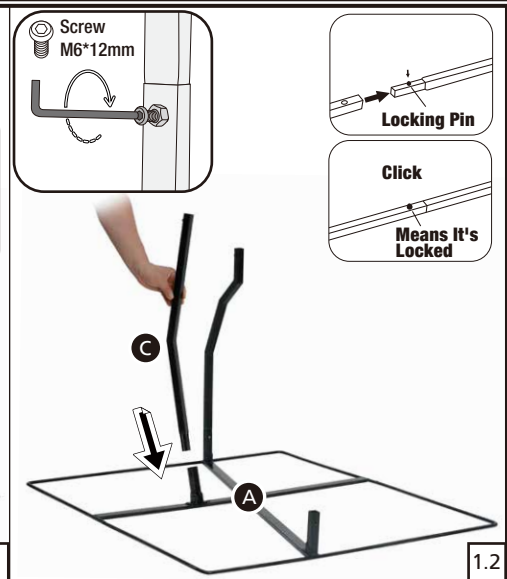


1.2

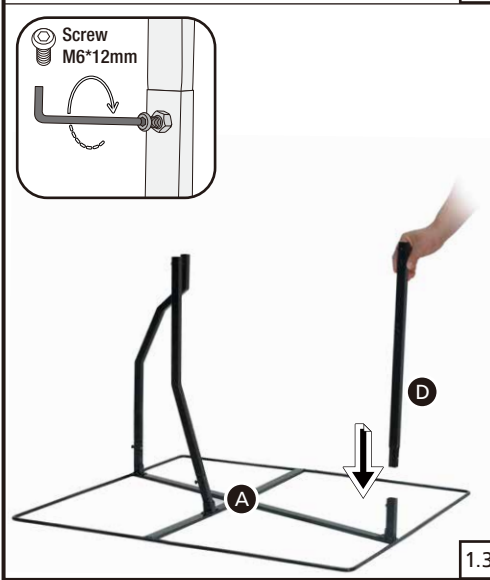


1.3



1.4







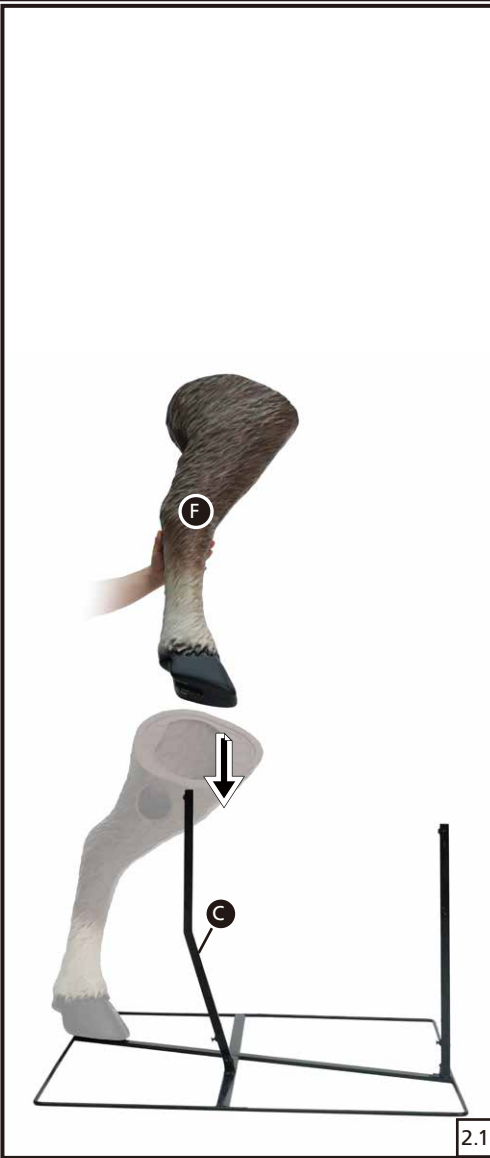


2.1









2.2



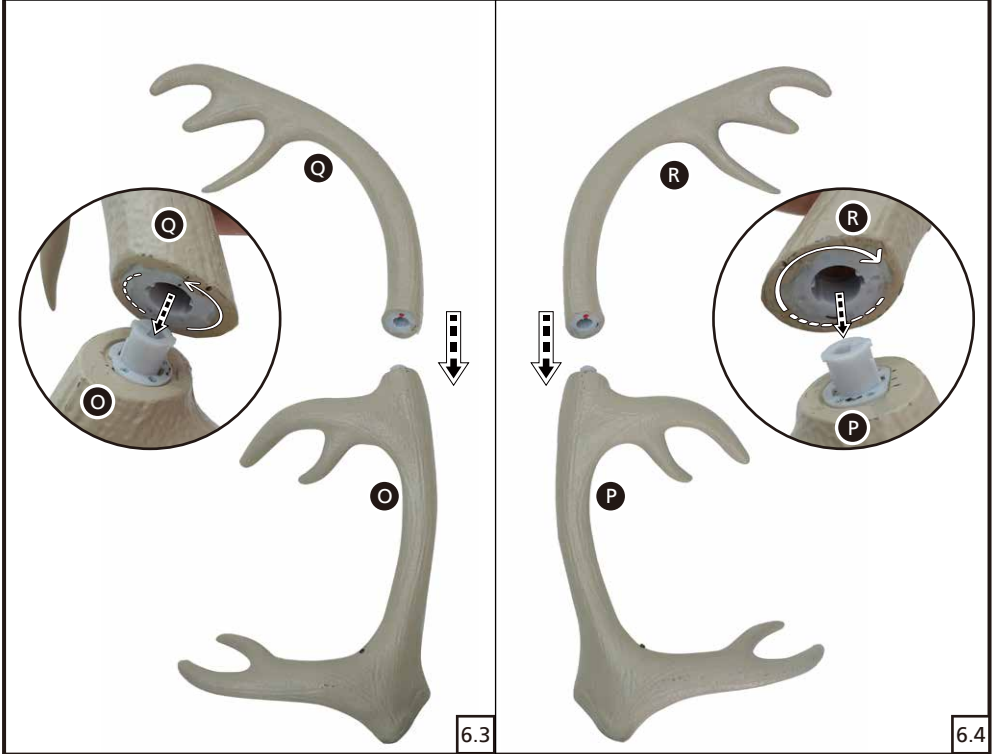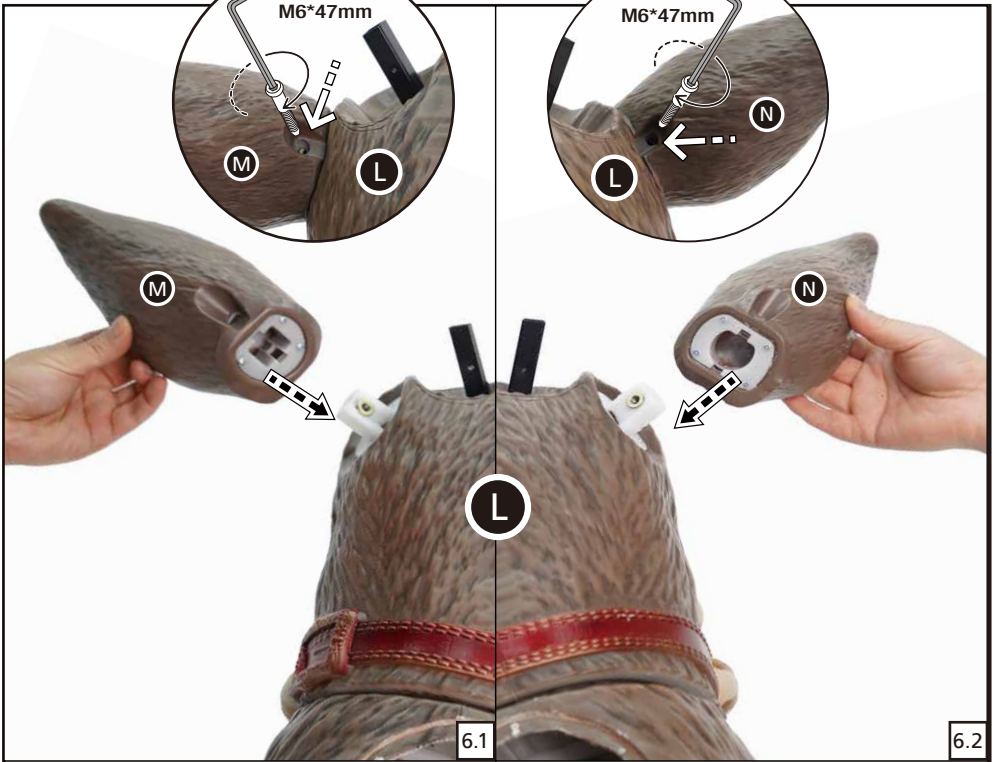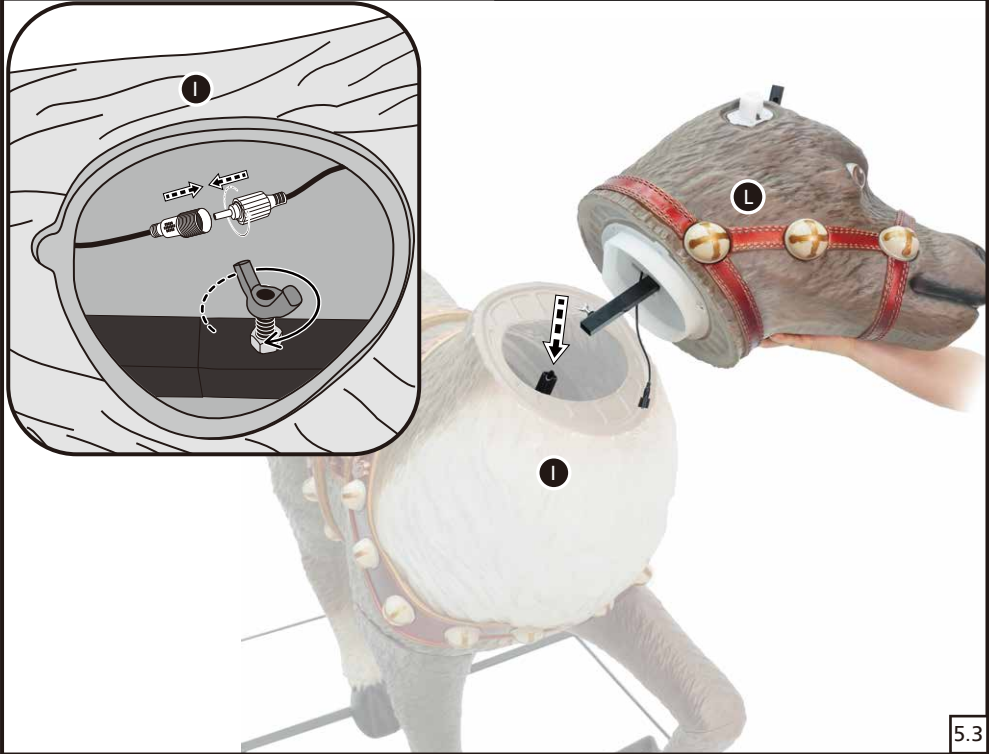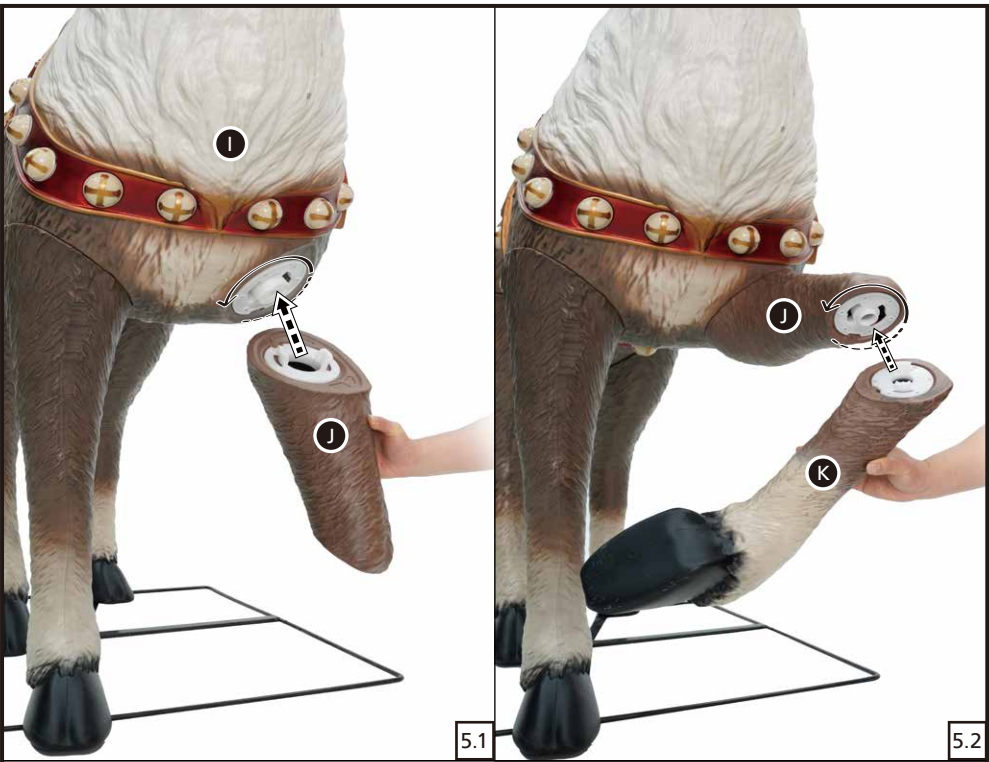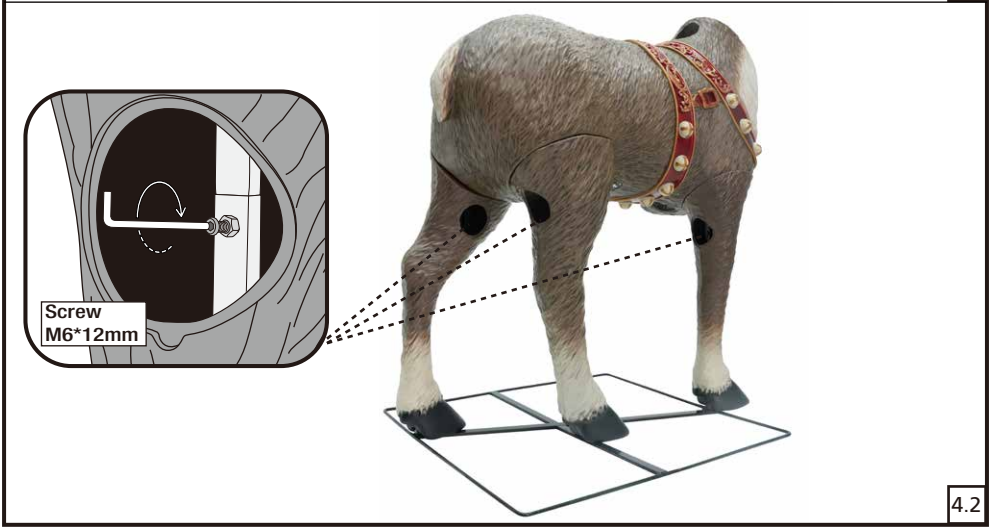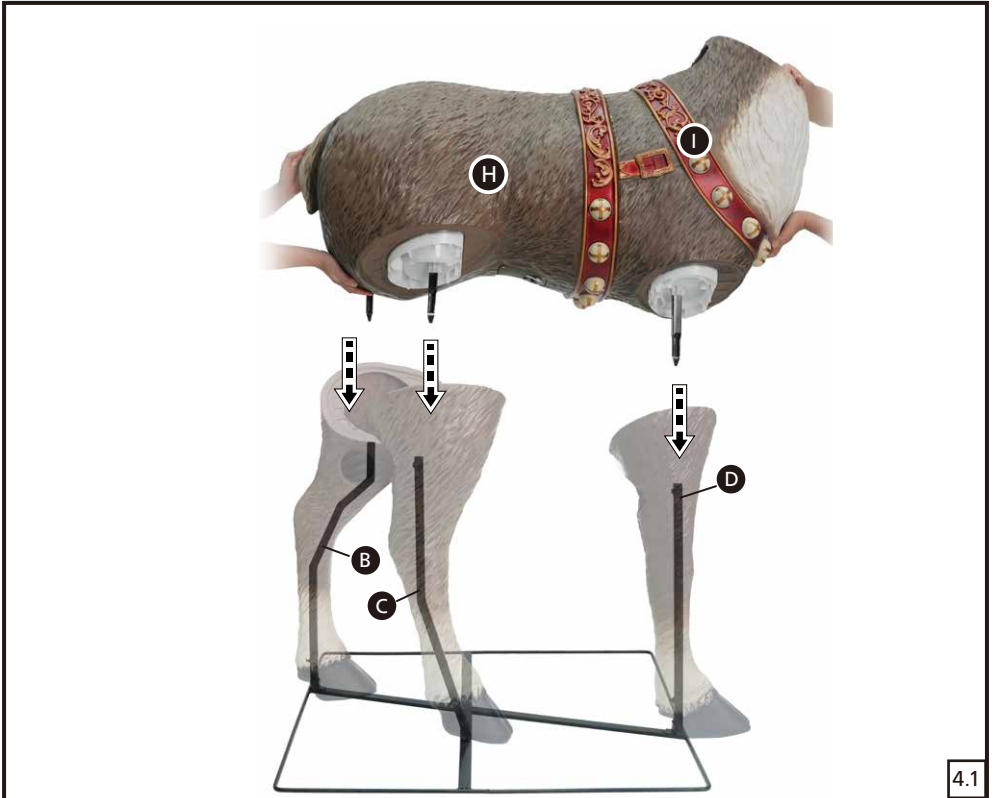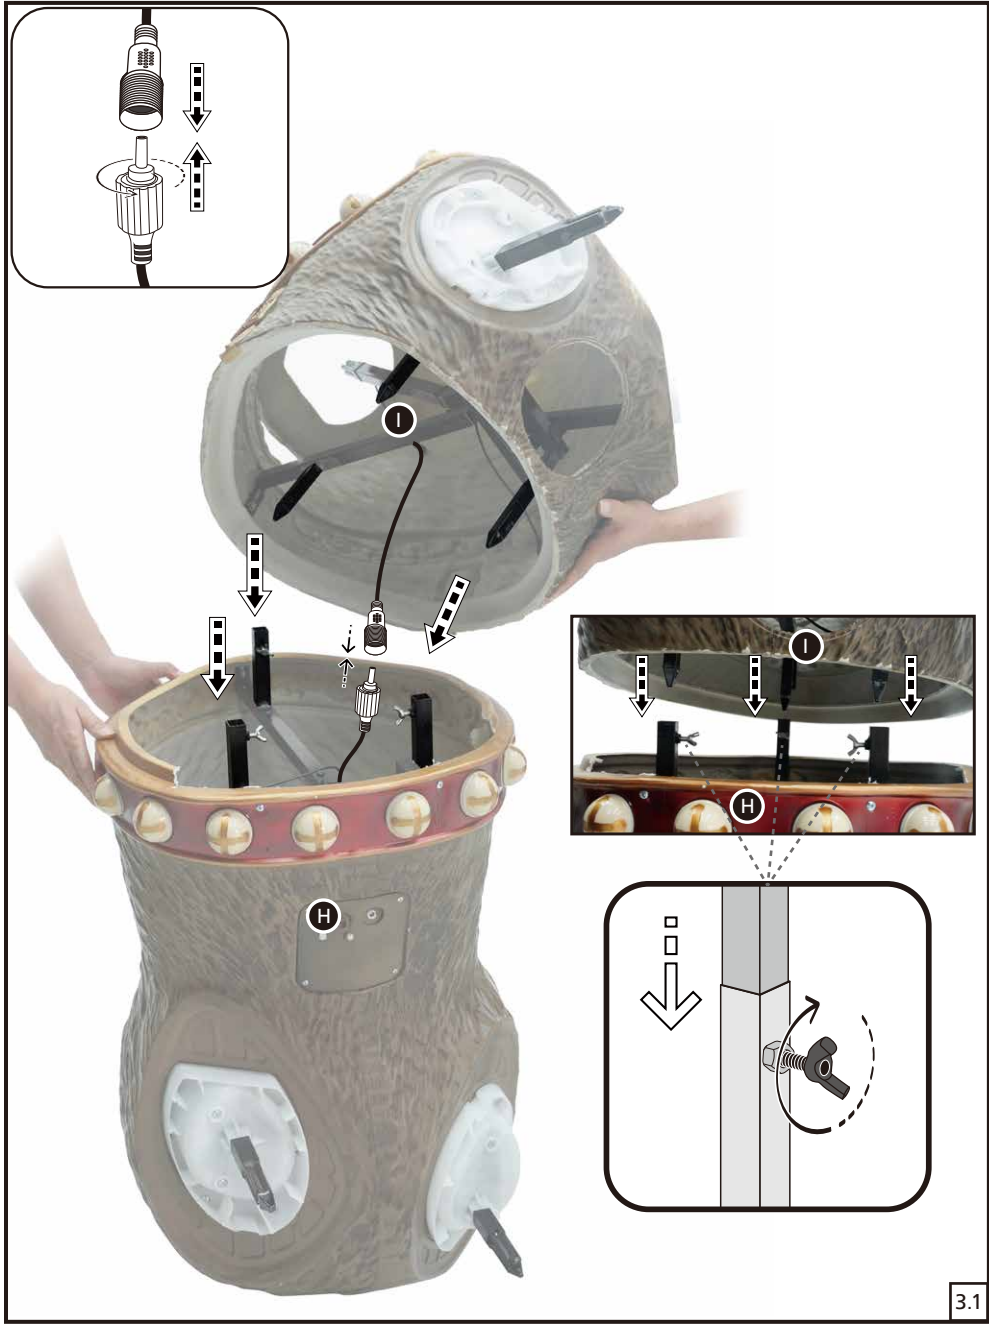



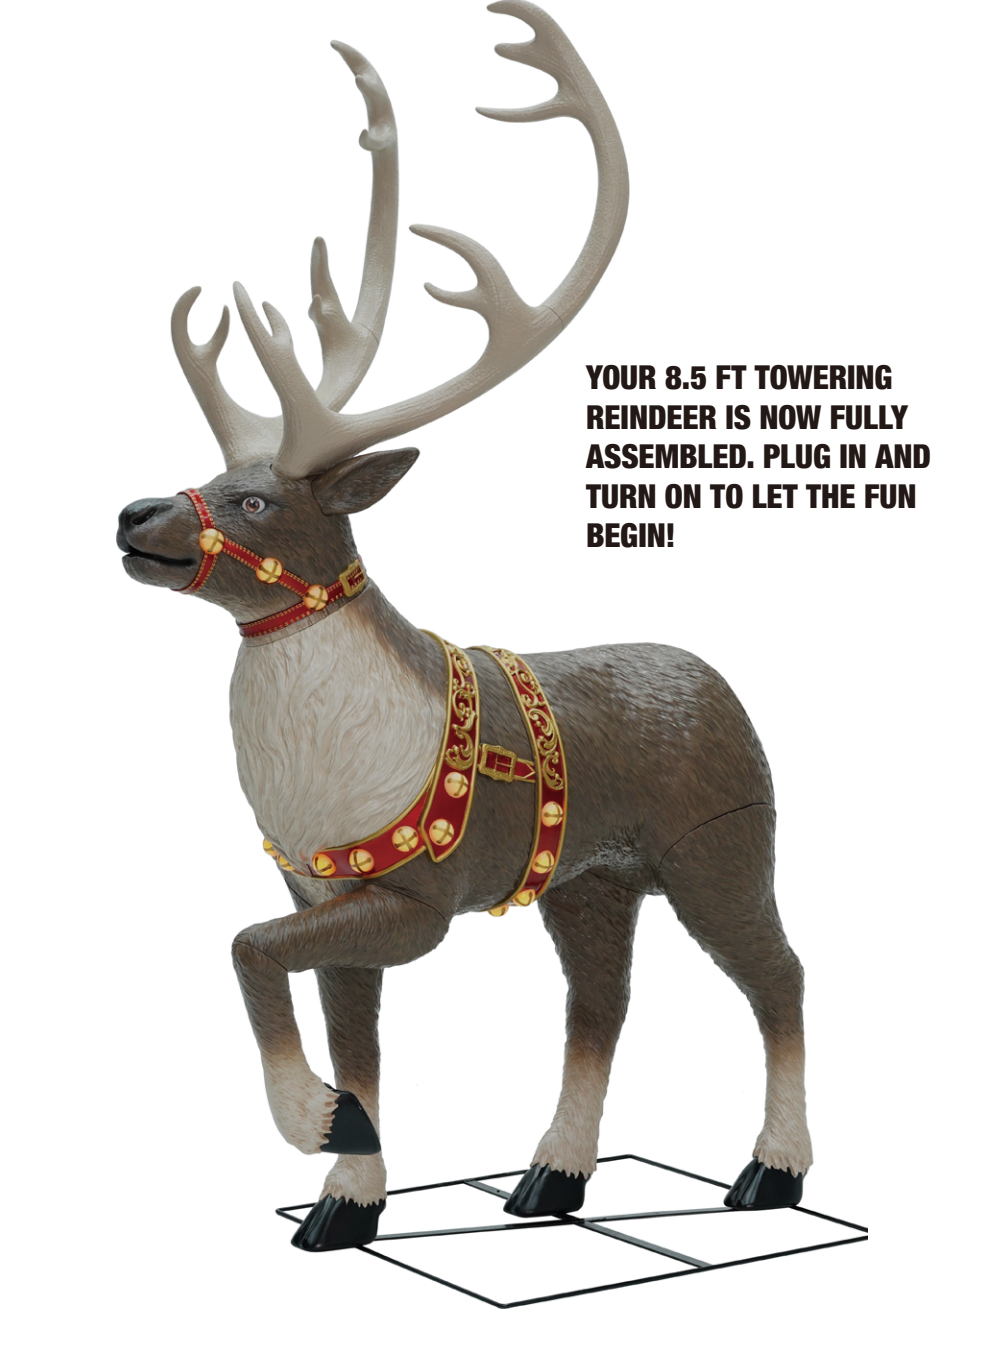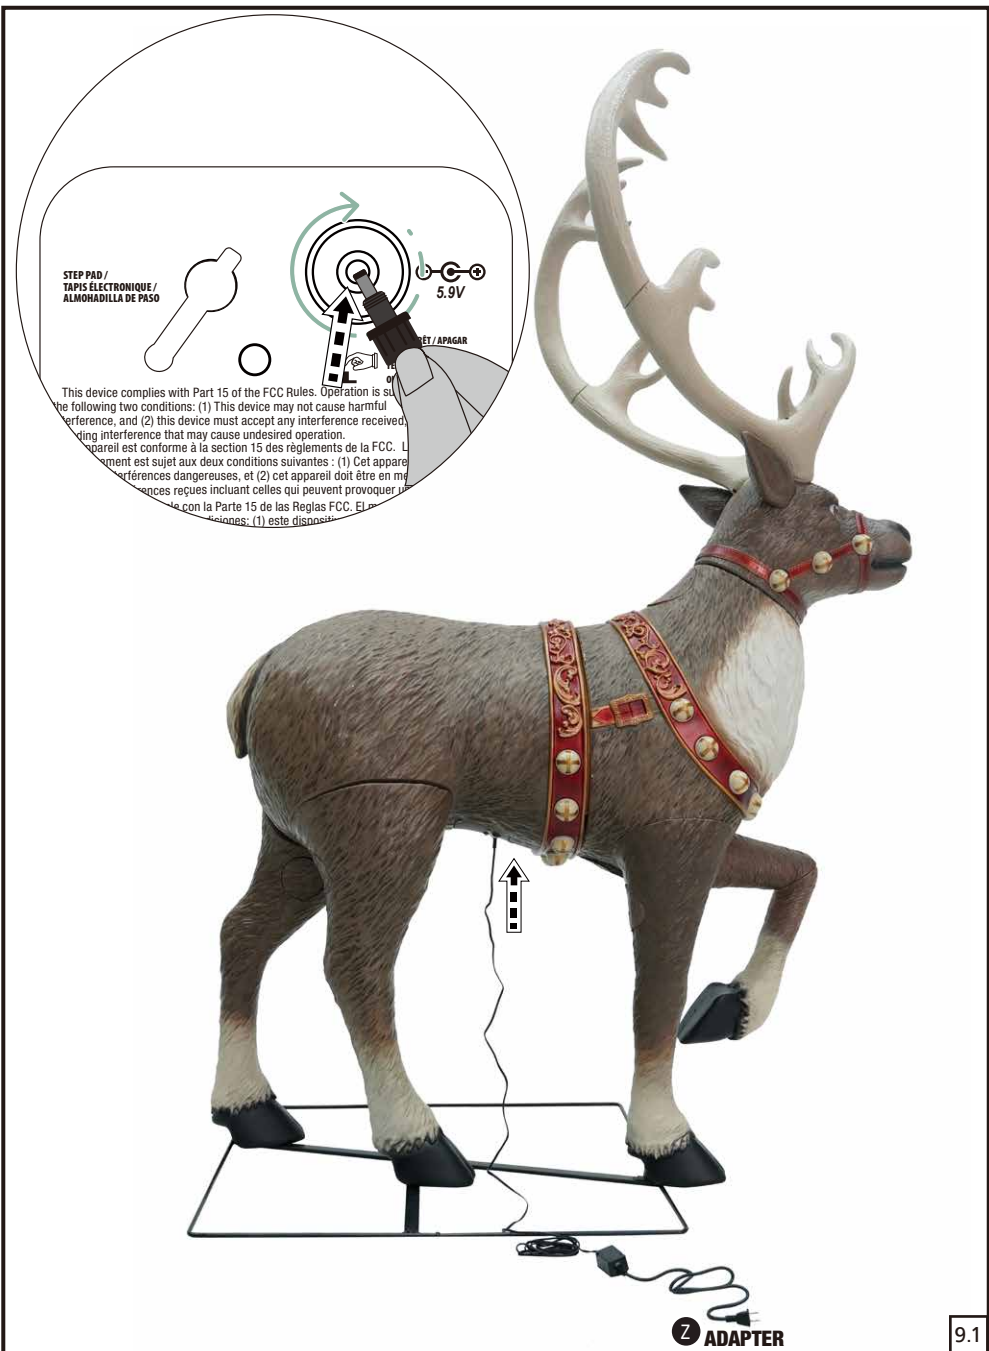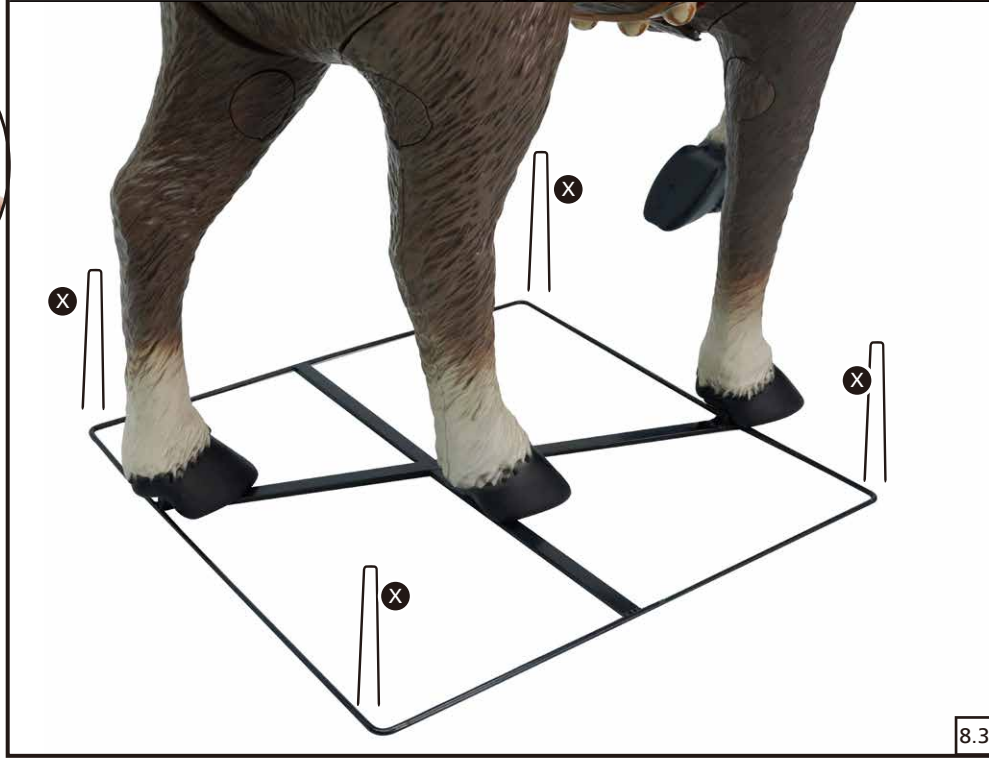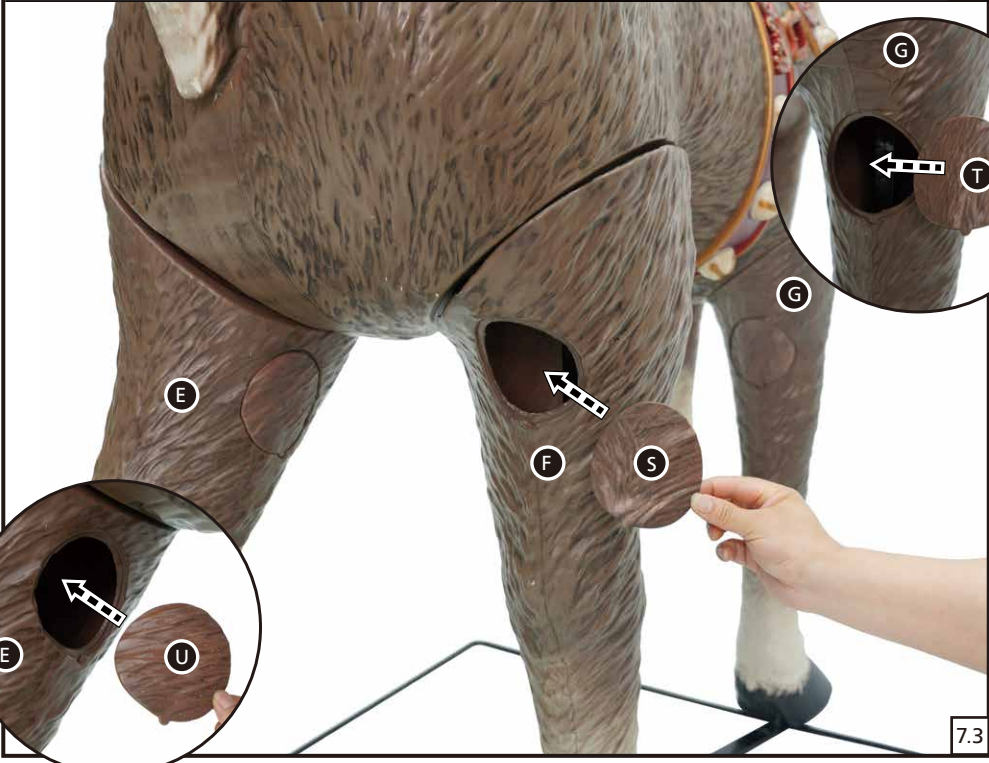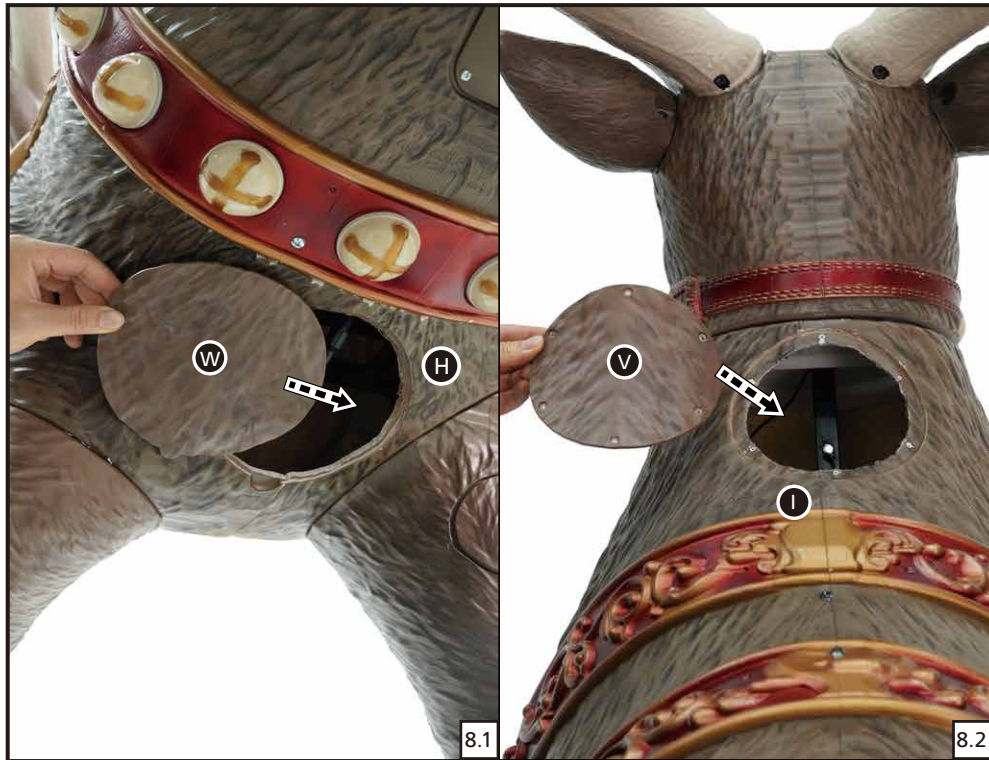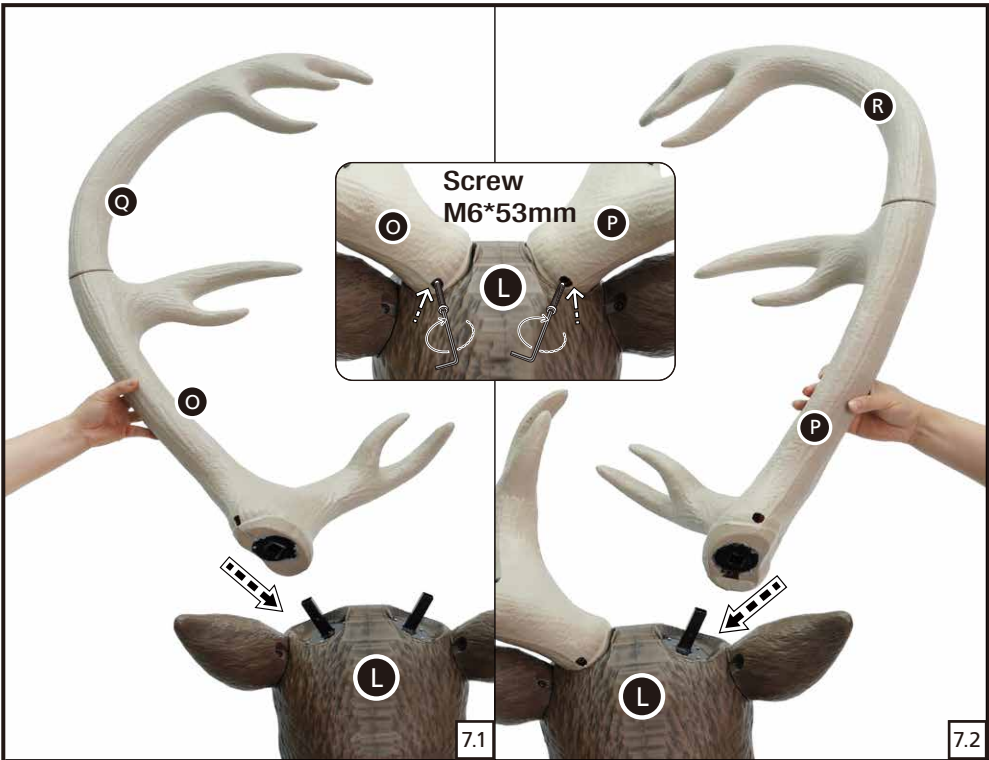

**YOUR 8.5 FT TOWERING REINDEER IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!**



NOTE: Make sure the waterproof cap is covering the Try Me receiver at all times when not in use.

STEP PAD /  
TAPIS ÉLECTRONIQUE /  
ALMOHADILLA DE PASO

5.9V

OFF / ARRÊT / APAGAR  
TIMER / MINUTEUR /  
TEMPORIZADOR  
ON / MARCHÉ / ENCENDER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la section 15 des règlements de la FCC. Le fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil ne doit pas émettre d'interférences dangereuses, et (2) cet appareil doit être en mesure d'accepter toutes les interférences reçues incluant celles qui peuvent provoquer un mauvais fonctionnement.

Este dispositivo cumple con la Parte 15 de las Reglas FCC. El manejo está sujeto a las siguientes dos condiciones: (1) este dispositivo no debe causar interferencias dañinas, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden causar un funcionamiento indeseado.

CAN ICES-003(B)/NMB-003(B)  
© Seasonal Visions International Limited  
All Rights Reserved  
Tous droits réservés  
Reservados todos derechos

Made in China  
Fabriqué en Chine  
Hecho en China

5.9V

OFF / ARRÊT / APAGAR  
TIMER / MINUTEUR /  
TEMPORIZADOR  
ON / MARCHÉ / ENCENDER

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (H) Body, as desired.
2. Settings:

OFF / ARRÊT / APAGAR	This switch mode allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not Included). The item will operate for one activity cycle with each Step Pad or Try Me activation. Otherwise, the item will stay off.
TIMER / MINUTEUR / TEMPORIZADOR	In this mode, the lights of the item are activated for a 6 hour period and then deactivated- ed for an 18 hour period. This cycle continues indefinitely until the setting is changed.
ON / MARCHÉ / ENCENDER	This switch mode will continuously operate the lights of the item.

WARNING:

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic parts away from children.

- Don't climb or pull on product.
- Don't add to or modify product.
- Assemble and place the product on level surfaces only.
- Don't push or tilt product.
- Please assemble item according to instructions.
- Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
- Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

1

WE SUGGEST AT  
LEAST TWO ADULTS  
FOR ASSEMBLY

2

NO MOVING AFTER  
FULLY ASSEMBLED

3

LEVEL AREA ONLY

7

USE WEIGHTS ON  
THE BASE

8

CONTACT US  
IF LIGHTS DON'T  
WORK

4

DO NOT PUSH  
OR TILT

5

DO NOT CLIMB  
OR PULL ON

6

DO NOT ADD TO  
OR MODIFY

9

DO NOT  
DISPLAY DURING  
STRONG WINDS

10

CONTACT US  
1-855-434-6543

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY(1-855-434-6543)  
HOMEDEPOT.COM